

# ECA

# **Engineered Computer Appliance Operating System**

ECA45

ecaOS 6.3

**USER GUIDE** 

Revision 1.7 6 Mar 2024





#### **Document Title**

Engineered Computer Appliance (ECA45) Operating System 6.3 User Guide

#### **Document Revision**

Revision	Date	Description	Author
00	20 Sep 2022	1 <sup>st</sup> Edition	Jemiruddin
01	12 Oct 2022	2 <sup>nd</sup> Edition	Jemiruddin
1.1	22 Nov 2022	2 <sup>nd</sup> Edition with minor cosmetic change	Sengfu
1.2	19 March 2023	3 <sup>rd</sup> Edition	Jemiruddin
1.3	19 April 2023	4 <sup>th</sup> Edition (Bay orientation)	Jemiruddin
1.4	30 May 2023	Updated to ecaOS 6.1	Keong
1.5	23 Nov 2023	Updated to ecaOS 6.2	Keong
1.6	22 Jan 2024	ECA45 Redundant PSU	Keong
1.7	6 Mar 2024	Updated to ecaOS 6.3	Keong



## **Table of Contents**

1	ECA4.5	7
	1.1 FX series	7
	1.2 EX series	8
	1.3 DX series	9
	1.4 MX series	10
	1.5 VW series	11
	1.6 ECA with redundant PSU	12
	1.7 AX Series	13
	1.8 Security & Virtual Key	14
2	Heartbeat	
	2.1 What is Heartbeat	
	2.2 Heartbeat Alert	15
3	Rail	
	3.1 Package Content	
	3.2 Sliding Rail Assembly	
	3.3 Installation Steps	
4	ECA Naming	
5	ECA Series	
6	ecaOS	
_	1.9 ecaOS Login	_
	1.10 ecaOS Locked Out	
7	Dashboard and Notification	
	7.1 Accessing ecaOS Dashboard	
	7.1.1 Using Virtual Security Key (ECA Access Code)	
	7.1.2 Get Virtual Security Key (ECA Access Code)	
	7.1.3 Remotely Access ecaOS	
	7.2 ecaOS Dashboard ➤ Summary	35
8	System	37
	8.1 System Monitor	37
	8.2 Service Monitor	40
	8.2.1 Add Services	40
	8.2.2 Delete Services	43
	8.3 Application Monitor	44
	8.3.1 Add Application	44
	8.3.2 Delete Application	
	8.4 Processor Activity	48
	8.5 Memory Activity	
	8.6 Disk Activity	
	8.7 Network Activity	
	8.8 Disk Health	
	8.9 Disk Guard	57
	8.9.1 Hard disk change during ECA Power Off	58
	8.10 Session Shield	
	8.10.1 Activate Session Shield	
	8.10.2 Deactivate Session Shield	
	8.10.3 Exclusion List	63
	8.10.4 Add Exclusion Files or Folder	
	8.10.5 Delete Exclusion Files or folder	
	8.10.6 Add Registry Keys	
	8.10.7 Delete Exclusion Registry Key	
	8.10.8 Status: Warning	



	8.10.9 Status: Critical	67
	8.11 Device Monitor	69
	8.11.1 Add New Monitor	69
	8.11.2 Delete Monitor	71
	8.12 Recording Monitor	72
	8.12.1 Add New Monitor	73
	8.12.2 Delete Monitors	74
9	Management	75
	9.1 General	
	9.1.1 Authorize Restart	75
	9.1.2 Authorize Shutdown	
	9.1.3 Saving & Deploy Layer	
	9.1.3.1 Save Layer	
	9.1.3.2 Soft Reset	
	9.1.3.3 Hard Reset	81
	9.1.3.4 Last Saved Layer Information	83
	9.1.4 Machine Name	
	9.1.5 Change Dashboard Port	83
	9.2 Security Key	
	9.2.1 Register Security Key	
	9.2.2 Delete Security Key	85
	9.2.3 Add Virtual Security Key	86
	9.2.4 Delete Virtual Security Key	88
	9.3 Network	89
	9.3.1 Enable DDNS	89
	9.3.2 Enable Network Teaming	89
	9.3.3 Disable Network Teaming	
	9.4 RSS (Redundant Storage System)	91
	9.4.1 Create Storage Pool	91
	9.4.2 Delete Storage Pool	
	9.4.3 Extend Storage Pool	94
	9.4.4 Repair Storage Pool	95
	9.5 Settings	99
	9.5.1 Email Recipient Settings	
	9.5.2 Mail Servers	
	9.5.3 Events	99
	9.5.3.1 Events List	
10	Events	
	10.1 Notification	
	10.2 Logs	
	10.2.1 Filtering Log	
	10.2.2 Exporting Log	
	10.3 Report	
11	• • • • • • • • • • • • • • • • • • • •	
	11.1 Microsoft Remote Desktop	
	11.2 Chrome Remote Desktop	
	11.2.1 Setup ECA into your Chrome Remote Desktop	
	11.2.2 Accessing ECA via Chrome Remote Desktop?	
12	About	
	12.1 Machine Information	
	12.2 Heartbeat Information	120
13	APPENDIX	121
	13.1 Processor Activity	
	13.1.1 CPU activity above limit	121




13.2.1 Memory Activity       123         13.2.1 Memory usage above limit       123         13.2.2 Memory activity back to normal       124         13.3.1 Disk read activity back to normal       125         13.3.2 Disk read activity back to normal       126         13.3.3 Disk write activity back to normal       128         13.3.4 Disk write activity back to normal       128         13.4.1 Network send activity above limit       129         13.4.1 Network send activity back to normal       130         13.4.2 Network receive activity below limit       131         13.4.3 Network receive activity below limit       131         13.5 Session Shield       133         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.6.3 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       138         13.7.3 Disk Removed Acknowledge       141         13.7.4 Disk Replaced Acknowledge       142	13.1.2 CPU activity back to normal	122
13.2 Memory activity back to normal       124         13.3 Disk Activity       25         13.3.1 Disk read activity above limit       25         13.3.2 Disk read activity back to normal       126         13.3.3 Disk write activity back to normal       127         13.3.4 Disk write activity back to normal       128         13.4 Network Activity       129         13.4.1 Network send activity back to normal       130         13.4.2 Network send activity back to normal       130         13.4.3 Network receive activity below limit       131         13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6.1 Warning Status Disk       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed Acknowledge       140         13.7.3 Disk Removed Acknowledge       141         13.7.5 Disk Replaced Acknowledge       142         13.8.1 CA reboot more than 3 times	13.2 Memory Activity	123
13.3 Disk Activity       125         13.3.1 Disk read activity back to normal       125         13.3.2 Disk read activity back to normal       126         13.3.3 Disk write activity back to normal       127         13.3.4 Disk write activity back to normal       128         13.4 Network send activity back to normal       129         13.4.1 Network send activity back to normal       130         13.4.2 Network receive activity below limit       131         13.4.3 Network receive activity back to normal       130         13.5.1 Warning Status       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       138         13.7.2 Disk Removed Acknowledge       140         13.7.4 Disk Replaced Acknowledge       141         13.7.5 Disk Replaced Acknowledge       142         13.8.1 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       1	13.2.1 Memory usage above limit	123
13.3.1 Disk read activity above limit       125         13.3.2 Disk read activity back to normal       126         13.3.3 Disk write activity below limit       127         13.3.4 Disk write activity back to normal       128         13.4 Network Activity       129         13.4.1 Network send activity above limit       129         13.4.2 Network receive activity back to normal       130         13.4.3 Network receive activity back to normal       131         13.4.4 Network receive activity back to normal       132         13.5. Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       133         13.5.3 Status back to normal       135         13.6.1 Warning Status Disk       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.2 Disk Removed       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.5 Disk Replaced Acknowledge       141         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Reboot       144	13.2.2 Memory activity back to normal	124
13.3.1 Disk read activity above limit       125         13.3.2 Disk read activity back to normal       126         13.3.3 Disk write activity below limit       127         13.3.4 Disk write activity back to normal       128         13.4 Network Activity       129         13.4.1 Network send activity above limit       129         13.4.2 Network receive activity back to normal       130         13.4.3 Network receive activity back to normal       131         13.4.4 Network receive activity back to normal       132         13.5. Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       133         13.5.3 Status back to normal       135         13.6.1 Warning Status Disk       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.2 Disk Removed       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.5 Disk Replaced Acknowledge       141         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Reboot       144	13.3 Disk Activity	125
13.3.2 Disk read activity back to normal.       126         13.3.3 Disk write activity below limit       127         13.4 Network Activity       128         13.4.1 Network send activity above limit       129         13.4.2 Network send activity back to normal.       130         13.4.2 Network receive activity back to normal.       130         13.4.3 Network receive activity back to normal.       131         13.4.4 Network receive activity back to normal.       132         13.5 Session Shield.       133         13.5.1 Warning Status       133         13.5.2 Critical Status       133         13.6.1 Warning Status back to normal.       135         13.6 Disk Health       136         13.6.1 Warning Status Disk.       136         13.6.2 Critical Status Disk.       136         13.6.2 Critical Status Disk.       136         13.7 Disk Guard.       138         13.7.1 New disk / Disk Inserted.       138         13.7.2 Disk Removed.       138         13.7.3 Disk Removed Acknowledge.       140         13.7.4 Disk Replaced Acknowledge.       140         13.8.1 ECA reboot more than 3 times.       143         13.8.2 AC Power loss.       143         13.8.3 Unauthorize ECA Reboot.       143		
13.3.3 Disk write activity below limit       127         13.3.4 Disk write activity back to normal       128         13.4 Network Activity       129         13.4.1 Network send activity back to normal       130         13.4.2 Network send activity back to normal       130         13.4.3 Network receive activity below limit       131         13.4.4 Network receive activity back to normal       132         13.5.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       133         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 A Opwer loss       143         13.8.3 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.7 A Power up ECA by pre		
13.4 Network Activity     129       13.4.1 Network send activity above limit     129       13.4.2 Network send activity back to normal     130       13.4.3 Network receive activity back to normal     131       13.4.4 Network receive activity back to normal     132       13.5 Session Shield     133       13.5.1 Warning Status     133       13.5.2 Critical Status     134       13.6.3 Siatus back to normal     135       13.6 Disk Health     136       13.6.1 Warning Status Disk     136       13.6.2 Critical Status Disk     136       13.7.1 New disk / Disk Inserted     138       13.7.2 Disk Removed     138       13.7.3 Disk Removed Acknowledge     140       13.7.5 Disk Replaced     141       13.8.1 ECA reboot more than 3 times     143       13.8.3 Unauthorize ECA Reboot     143       13.8.4 Unauthorize ECA Shutdown     144       13.8.5 Authorize ECA Shutdown     144       13.8.6 Force shutdown by pressing power futton     144       13.8.7 Power up ECA by pressing power button     144       13.8.8 Force shutdown by pressing power futal Security Key     145       13.8.10Accessing Dashboard using Security Key     145       13.8.12Delete paired Security Key     145       13.8.13Delete Virtual Security Key     146	13.3.3 Disk write activity below limit	127
13.4.1 Network send activity back to normal.       129         13.4.2 Network receive activity back to normal.       130         13.4.3 Network receive activity below limit.       131         13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal.       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       138         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced Acknowledge       141         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10dete paired Security Key       145         13.8.10dete paired Security Key       145	13.3.4 Disk write activity back to normal	128
13.4.2 Network send activity back to normal       130         13.4.3 Network receive activity below limit       131         13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       144         13.8.5 Authorize ECA Reboot       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power (heartbeat) button       145         13.8.10 Accessing Dashboard using Security Key       145         13.8.10 Delete paired Security K	13.4 Network Activity	129
13.4.3 Network receive activity below limit       131         13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       143         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.10Accessing Dashboard using Security Key       145         13.8.13Delete Virtual Secu	13.4.1 Network send activity above limit	129
13.4.3 Network receive activity below limit       131         13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       143         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.10Accessing Dashboard using Security Key       145         13.8.13Delete Virtual Secu	13.4.2 Network send activity back to normal	130
13.4.4 Network receive activity back to normal       132         13.5 Session Shield       133         13.5.1 Warning Status       133         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.8 Log       142         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Shutdown       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.10Accessing Dashboard using Security Key       145         13.8.11Add new Security Key       145         13.8.13Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.17PS		
13.5.1 Warning Status       134         13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       136         13.7.1 Disk Guard       138         13.7.2 Disk Removed       138         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Soye Layer <td< td=""><td></td><td></td></td<>		
13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.19Soft Reset	13.5 Session Shield	133
13.5.2 Critical Status       134         13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.19Soft Reset	13.5.1 Warning Status	133
13.5.3 Status back to normal       135         13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.19Soft Reset       147	g and the state of	
13.6 Disk Health       136         13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.5 Disk Replaced       141         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Pop ECA cover chassis       146         13.8.15Pop ECA cover chassis       146         13.8.15Pop ECA cover chassis       146         13.8.19Soft Reset       147		
13.6.1 Warning Status Disk       136         13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.18Save Layer       147         13.8.19Soft Reset       1		
13.6.2 Critical Status Disk       137         13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.19Soft Reset       147         13.8.19Soft Reset       147		
13.7 Disk Guard       138         13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.18Save Layer       147 <t< td=""><td>g .</td><td></td></t<>	g .	
13.7.1 New disk / Disk Inserted       138         13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.12Delete paired Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.7.2 Disk Removed       139         13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.7.3 Disk Removed Acknowledge       140         13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       145         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.7.4 Disk Replaced       141         13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.7.5 Disk Replaced Acknowledge       142         13.8 Log       143         13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.12Delete paired Security Key       145         13.8.12Delete paired Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	· · · · · · · · · · · · · · · · · · ·	
13.8 Log	·	
13.8.1 ECA reboot more than 3 times       143         13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.2 AC Power loss       143         13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	<u> </u>	
13.8.3 Unauthorize ECA Reboot       143         13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.4 Unauthorize ECA Shutdown       144         13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.5 Authorize ECA Shutdown       144         13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.15Open ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.6 Authorize ECA Reboot       144         13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.7 Power up ECA by pressing power button       144         13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.19Soft Reset       147		
13.8.8 Force shutdown by pressing power (heartbeat) button       145         13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.9 Accessing Dashboard using Security Key       145         13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	, , , , , , , , , , , , , , , , , , , ,	
13.8.10Accessing Dashboard using Virtual Security Key       145         13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	, , , , , , , , , , , , , , , , , , , ,	
13.8.11Add new Security Key       145         13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.12Delete paired Security Key       146         13.8.13Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147		
13.8.13 Delete Virtual Security Key       146         13.8.14Add Virtual Security Key       146         13.8.15 Open ECA cover chassis       146         13.8.16 Close ECA cover chassis       146         13.8.17 PSU Status       147         13.8.18 Save Layer       147         13.8.19 Soft Reset       147		
13.8.14Add Virtual Security Key       146         13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	13.8.12Delete paired Security Key	146
13.8.15Open ECA cover chassis       146         13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	13.8.13Delete Virtual Security Key	146
13.8.16Close ECA cover chassis       146         13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	13.8.14Add Virtual Security Key	146
13.8.17PSU Status       147         13.8.18Save Layer       147         13.8.19Soft Reset       147	13.8.15Open ECA cover chassis	146
13.8.18Save Layer	13.8.16Close ECA cover chassis	146
13.8.19Soft Reset	13.8.17PSU Status	147
13.8.19Soft Reset	13.8.18Save Layer	147
	·	
	13.8.20Hard Reset	147





## 1 ECA4.5

#### 1.1 FX series

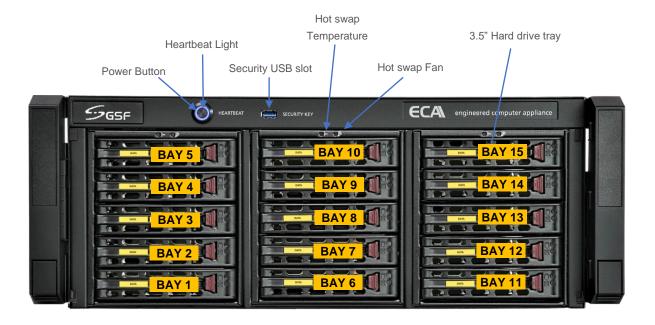


Power Button: Power button ECA

Heartbeat light: ECA operational indication

Security USB slot: This port for security key use to call 'System Manager'


Hot swap Temperature: The LED will light up if the temperature above 55 c

Hot swap fan: The LED will light up if no hot swap fan detected or not functioning

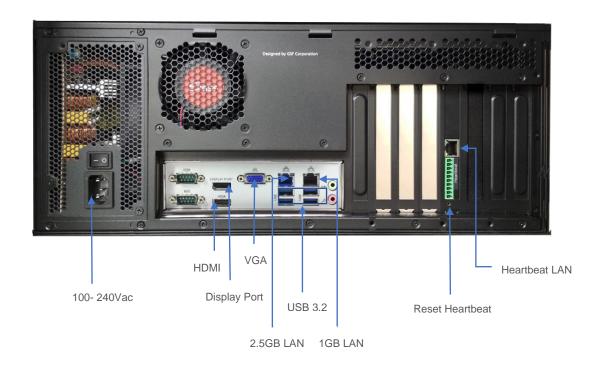




## 1.2 EX series

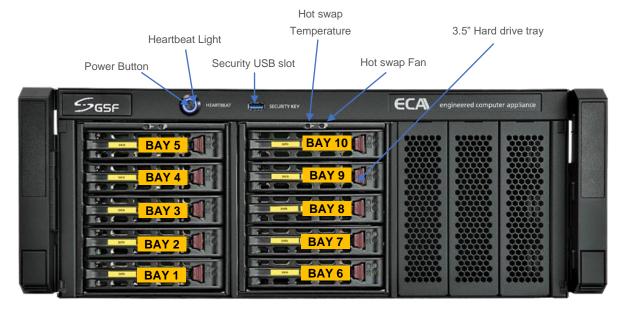


Power Button: Power button ECA
Heartbeat light: ECA operational indication

**Security USB slot**: This port for security key use to call 'System Manager' **Hot swap Temperature:** The LED will light up if the temperature above 55°c **Hot swap fan:** The LED will light up if no hot swap fan detected or not functioning

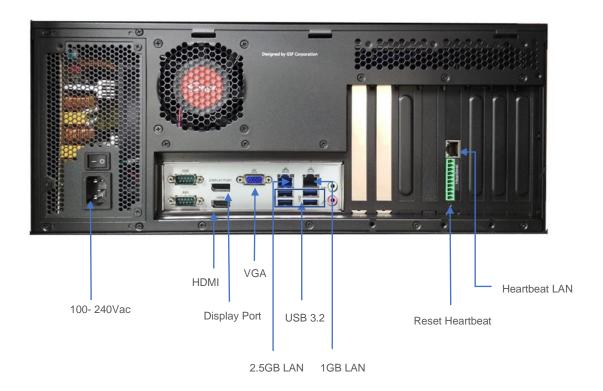




# 1.3 DX series

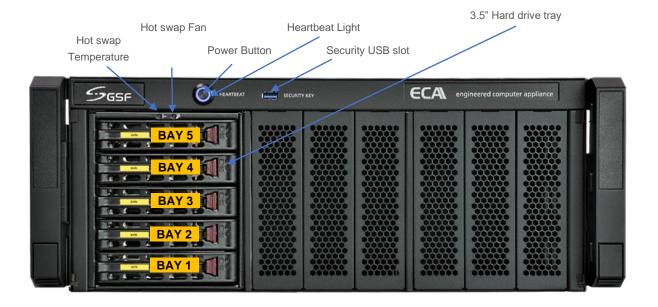

Power Button: Power button ECA


Heartbeat light: ECA operational indication

**Security USB slot**: This port for security key use to call 'System Manager' **Hot swap Temperature:** The LED will light up if the temperature above 55 c **Hot swap fan:** The LED will light up if no hot swap fan detected or not functioning

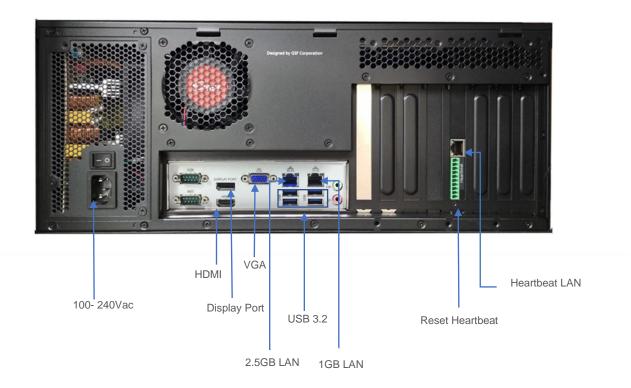




# 1.4 MX series

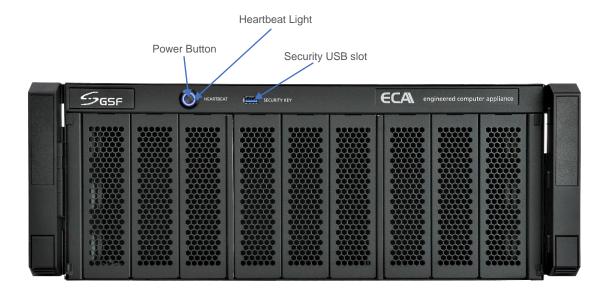

Power Button: Power button ECA
Heartbeat light: ECA operational indication

Security USB slot: This port for security key use to call 'System Manager'

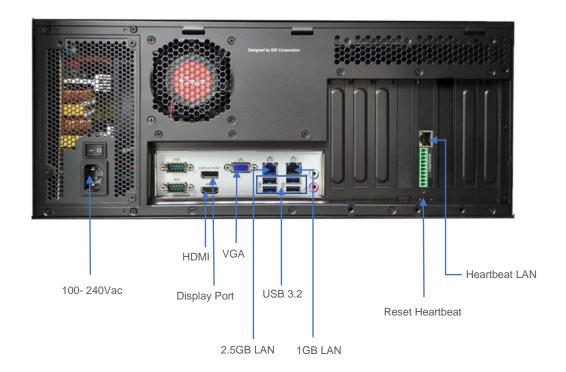




# 1.5 VW series







# 1.6 ECA with redundant PSU

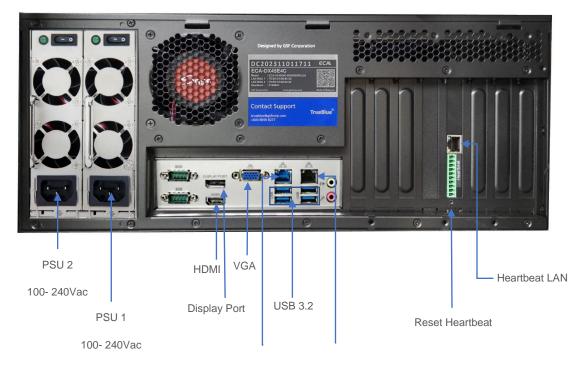


2.5GB LAN 1GB LAN



# 1.7 AX Series





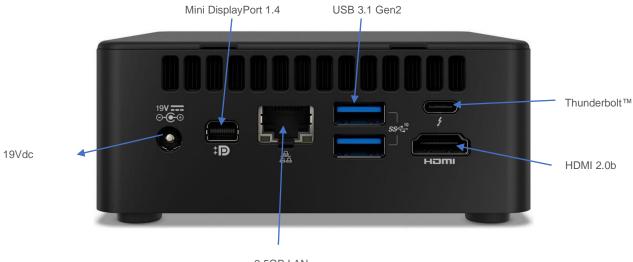



# 1.8 Security & Virtual Key



Uniquely designed USB security key which is paired to the ECA. It only can be used with the paired ECA. If the key is lost, new key can be issued by GSF and the paired ECA will automatically reject the usage of the lost key, should they be recovered later.

The Security key is used to gain access to 'System Manager'.

#### **Virtual Access Code:**

Virtual Access Code gain access to 'System Manager' without need security key. 'Google Authenticator' is required to install on your device such as phone or tablet.

#### When to use Virtual Access Code?

- Access 'System Manager' but no Security Key.
- Access 'System Manager' remotely access ECA from another desktop



# 2 Heartbeat

#### 2.1 What is Heartbeat

HeartBeat is around the clock hardware safeguard. Its micro controller overlooks the whole hardware platform to ensure continuous operation even in the event of critical breakdown.

In the event the server failed, it will send help signal via digital I/O or can be connect to CMS Alarm.

#### In what event the HeartBeat will react?

- Unauthorized Shutdown: The HeartBeat will reboot the ECA.
- Unauthorized Power Unplug: HeartBeat will produce beep tone.
- ECA not responding: HeartBeat will force restart the ECA after 2 minutes no respond.
- Blue screen: HeartBeat will force restart the ECA after 2 minutes no respond.

#### **ECA power LED indication:**

LED STATUS	ECA SCENARIO	DESCRIPTION	
Slow glow and dim	System running in OS	HeartBeat operating normally.	
Blinking	<ul><li>ECA OFF</li><li>ECA rebooting.</li><li>System running in OS</li></ul>	<ul><li>Low HeartBeat battery</li><li>ECA in rebooting status</li><li>Heartbeat not ready</li></ul>	

Click the link to view LED indication demonstration:

https://www.gsfcorp.com/downloads/eca-hb-led.gif

#### 2.2 Heartbeat Alert

	Beep Tone	Tone Description	Repeating Interval	ECA State	Scenario
1		Normal event	No repeat	ECA ON or OFF	Chassis closed.
				ECA ON	ECA powering up
				ECA OFF	Expected AC power loss.     AC power resumed.     Authorized shutdown
2		Bad event	No repeat	ECA ON	ECA failed to enter ecaOS after 15 minutes.     ecaOS not responsive for 2 minutes.



				Unauthorized shutdown
3	 linked with ecaOS	No repeat	In ecaOS or Layer Manager	Heartbeat     established link     with ecaOS/Layer     Manager.
4	Require human attention	10s	ECA ON	<ol> <li>Repetitive ECA reboot (more than 3 times within half an hour)<sup>1</sup></li> <li>Chassis opened (when not in Authorized Shutdown state)<sup>2</sup></li> <li>ECA failed to enter ecaOS (3 HB reboot attempts in 45 minutes)<sup>1,3</sup></li> </ol>
			ECA OFF	<ol> <li>Unexpected AC power loss<sup>4</sup></li> </ol>

#### NOTE:

- <sup>1</sup> Shutdown the ECA will mute the beep tone (Authorize or Unauthorize)
  - Authorize shutdown: Shutdown the ECA via System Manager menu
- Unauthorize shutdown: Shutdown the ECA via OS shutdown or Force shutdown by long press Power button.
- <sup>2</sup> Closing chassis cover will mute the beep tone
- <sup>3</sup> Successful entered OS will mute the beep tone
- <sup>4</sup> Resumed AC power to ECA will mute the beep tone




# 3 Rail

# **IMPORTANT NOTE**



Before beginning with the installation, it is important to make sure that the ECA can fit into the equipment rack you are using. Use of improperly rack size may result in injury.

Minimum requirement<sup>1</sup> for equipment rack depth, front to rear vertical mounting column, is <u>600mm</u>.

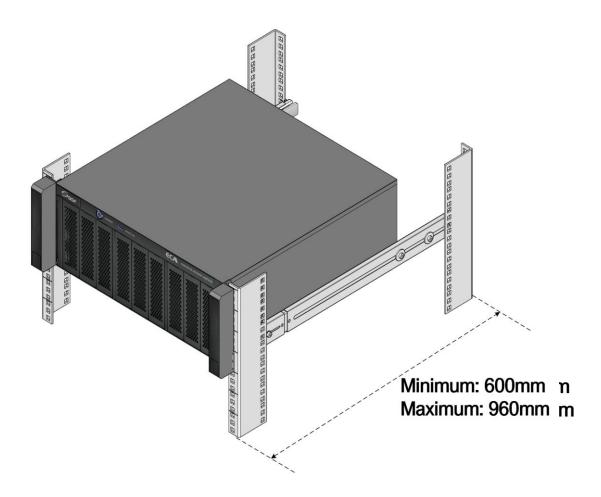

To avoid injury, it is strongly recommended the installation to be done by <u>TWO persons</u>.

<sup>&</sup>lt;sup>1</sup>Based on slide rail part number: King Slide 3A68-584BPZZ11ED.




# 3.1 Package Content

Content	Description	Quantity
	Sliding rail	2
	CH Screw	2
	SL Screw	8
	CL Screw	6
	RK Nut	10

# 3.2 Sliding Rail Assembly

The Sliding Rail assembly is comprised of 3 parts:

- Inner Rail
- Slide Rail
- Rail Bracket

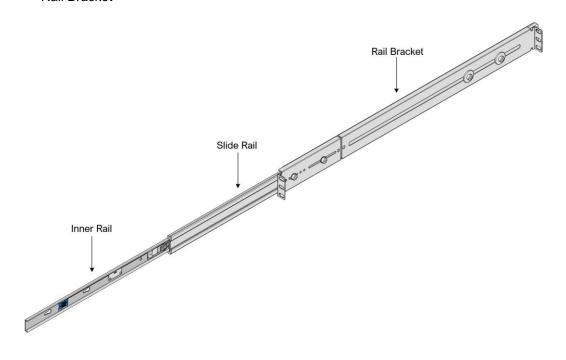




# 3.3 Installation Steps

Step 1: Detach the Inner Rail from the Sliding Rail assembly.

Extend the parts of the Sliding rail to reveal the WHITE color latch on the Inner Rail.


Pull and hold the <u>WHITE</u> color latch outwards, while simultaneously pulling the Inner Rail in outward direction. This shall remove the Inner Rail from the assembly.

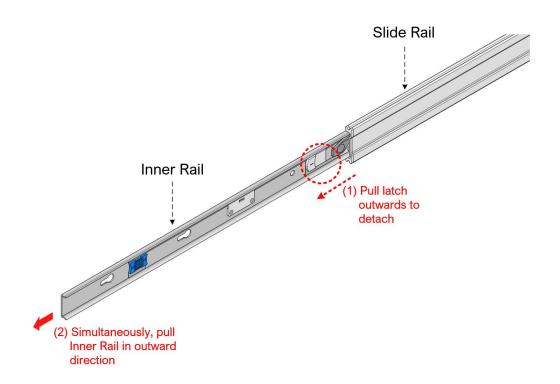

**DO NOT** remove the Slide rail from the Rail assembly. It is **NOT removable**.


Step 2: Attach Inner Rail to ECA Chassis.



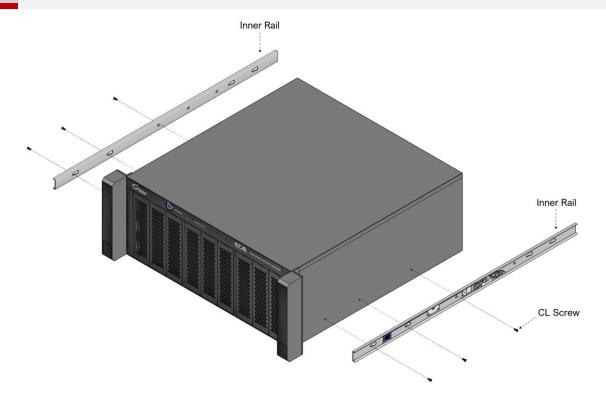


**Step 3:** Insert the RK nuts to Equipment Rack or Server Rack.

- Before inserting the nuts, make sure to reserve total 4U height and spacing for every ECA.
- The Sliding Rail is attached to the lowest 1U on the ECA.
- Ensure above the sliding rail, there is another 3U clearance space for the ECA.
- Take note of proper and correct spacing for 1U height.

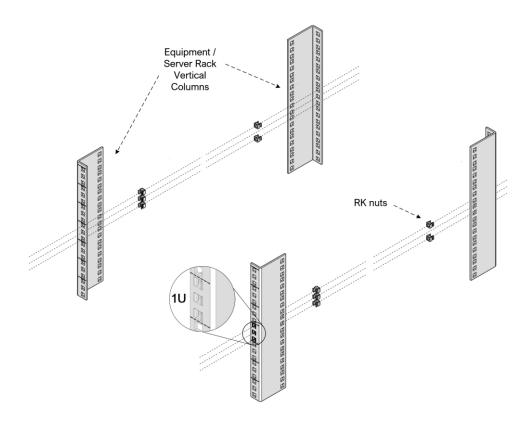




Step 4: Install the Rail Brackets to the Equipment rack or Server Rack. Place the Rail Brackets to the same level as the RK nuts, inserted in the previous step. Use SL screws and fasten them to the nuts. For the front, <a href="DO NOT fasten any screw to the middle nut">DO NOT fasten any screw to the middle nut</a>. The middle nut is reserved for fastening the

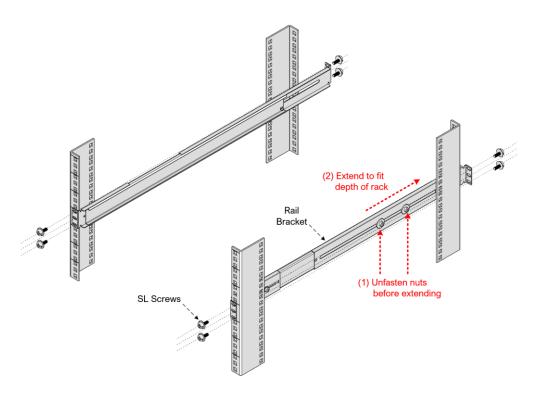


**Step 5:** Carry the ECA, which now has the Inner Rails attached, and ensure both Inner Rails are securely inserted into the Sliding Rail.

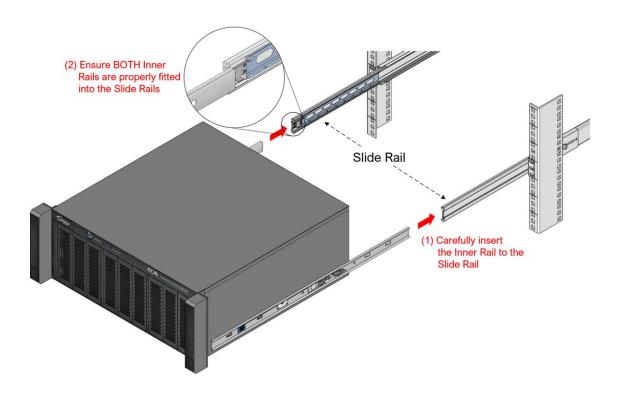




**Step 6:** Push the ECA inwards to the rack until the mounting brackets encounter the slide-rail stop.

Then, simultaneously pull and hold the **BLUE** latch on the Inner Rail, while pushing the ECA inwards. This will fully contract the whole Sliding Rail assembly.

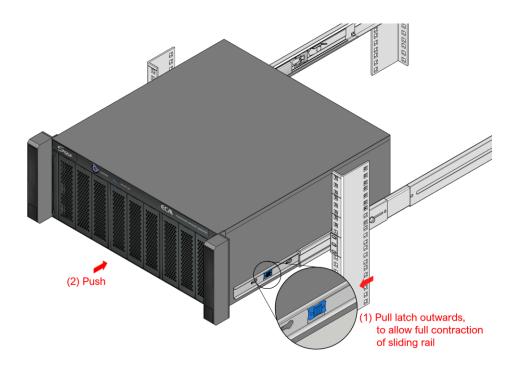


Step 7: The ECA, with the Sliding Rail at full contracted position, shall look like this:



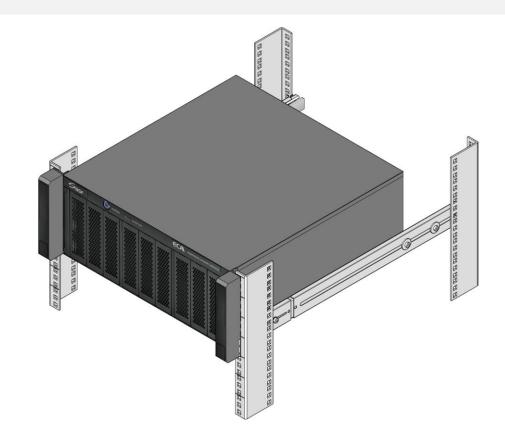


Step 8: Lift the screw cover on the earpiece of the ECA. Fasten ECA to the Sliding Rail using the CH Screw.

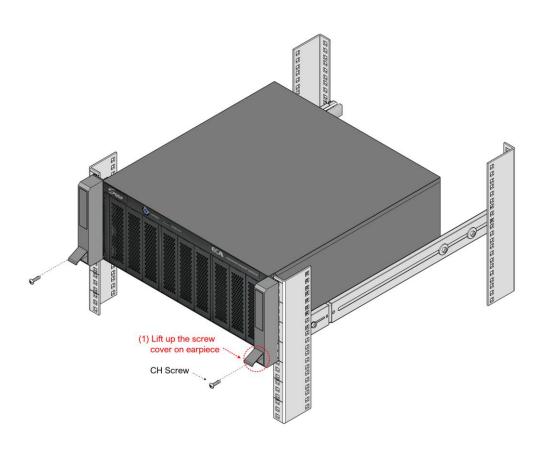



# 4 ECA Naming


The ECA naming will represent the specification of the platform.

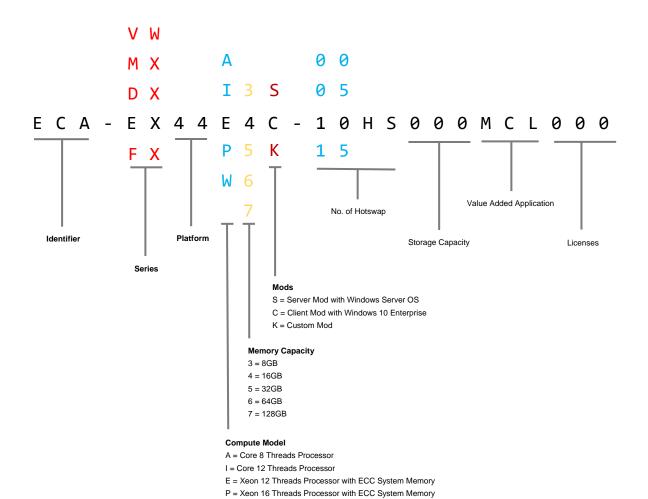

W = Xeon 20 Threads Processor with ECC System Memory



# 5 ECA Series

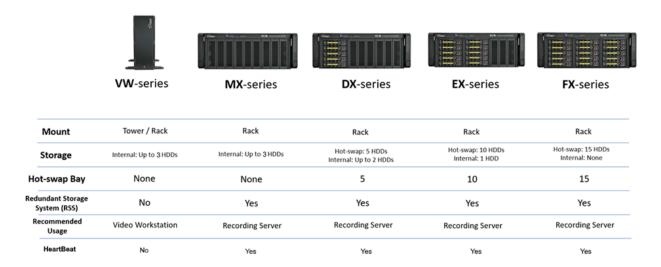



## 6 ecaOS

ecaOS is a protected operating system environment, equipped with a unique and practical feature called Triple Layers, essential for both reliable and secure operation of the ECA.

Its ability to Soft Reset within few minutes significantly reduces system down time in the event of, though rare, system disaster, such as corrupted Video Management Software or misconfiguration

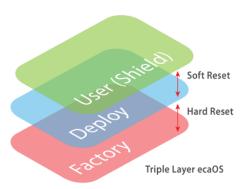


Figure 1: Triple Layers

#### **User Layer** (Current working layer)

This is a normal user operation layer with protected OS environment, any system changes without using the Embedded Security Key will be discarded after system reboot (Fast Reset)

#### **Deployment Layer** (Backup layer)

This is a good working state layer, usually saved by System Integrator with pre-configured NVR & camera settings

#### Factory Layer (Backup layer)

This is a good working state layer, with original default settings shipped from factor



# 1.9 ecaOS Login

Some ECA may be shipped without automatic login, subject to configurations. In such case, the ecaOS will boot until the login screen, and the prompt for login will be shown, as follow:

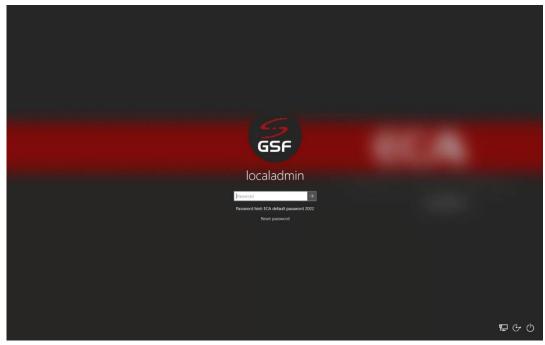


Figure 2: ecaOS Login Screen

Username: localadmin

Password: \*Please contact TrueBlue support

trueblue @gsfcorp.com +60-3-80908277

#### 1.10 ecaOS Locked Out

If the password enters in 3 times incorrectly, the logging screen will be lock for 15 minutes before retrying



Figure 3: Account Locked Out



# 7 Dashboard and Notification

Location of the Dashboard application and ecaOS Notification display area.

Notification area where all the activity within the ECA will be prompt out.

**Dashboard** is web base interface displaying overall information and system vitals of the ECA machine status

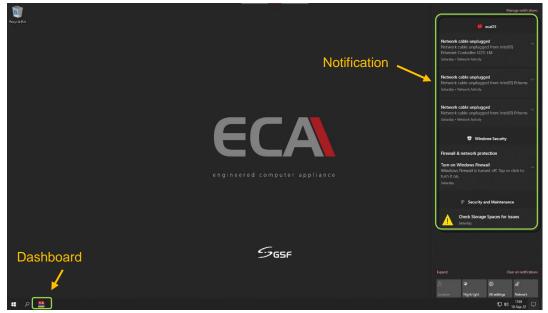


Figure 4: ecaOS Desktop



# 7.1 Accessing ecaOS Dashboard

There are two ways to access ecaOS Dashboard.

- 1. Security Key (USB)
- 2. Virtual Security Key card



Figure 5: Security Key & Virtual Security Key Card

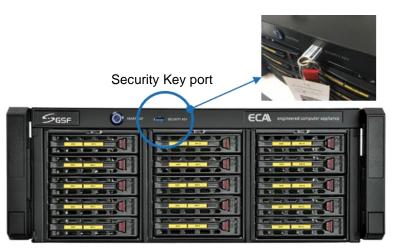


Figure 6: Security Key USB Port Location

- 1. Insert Security key to Security Key USB port
- 2. Run 'ecaOS Dashboard' ' from the system taskbar.

## 7.1.1 Using Virtual Security Key (ECA Access Code)

Run 'ecaOS Dashboard' 'From the desktop taskbar. Enter 'Access Code' from authenticator apps.



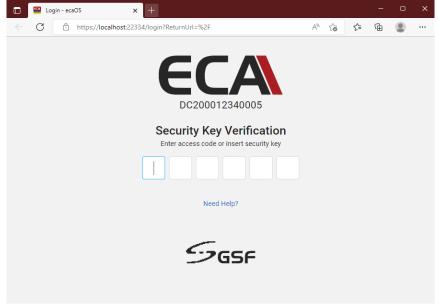


Figure 7: Dashboard Login Page

#### 7.1.2 Get Virtual Security Key (ECA Access Code)


ECA Access code is mandatary for logging into the Dashboard. To obtain the ECA Access code, follow the procedures below:

- 1. Download an Authenticator app. For Android user, go to 'Google Play'. For iOS user, go to 'App Store'.
- Search for 'authenticator'. 'Google Authenticator' or 'Microsoft Authenticator' should appear
  in the search result. You can install either one as the authenticator to use with ecaOS for
  obtaining the Access code.



Figure 8: App search results

3. This procedure is based on using Google Authenticator.

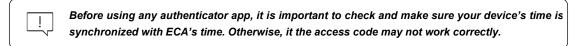

4. Run 'Google Authenticator' on your device. Click 'Begin' button.




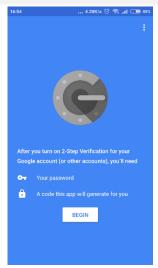


Figure 9: Authenticator Setup

5. Choose 'Scan a barcode' to start scanning the QR code, which can be found on the **Virtual Security card**.



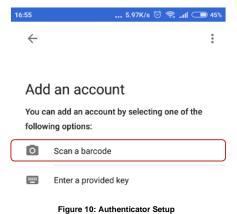

6. Ensure the QR code is position correctly within the scanner frame.



Figure 11: Authenticator Setup

7. The Access code will display in the app.



Figure 12: Authenticator Setup (4 of 4)

- 1. Access Code
- 2. Access Code will change for every 30 seconds
- Click here to scan another QR Code for others ECA 'Virtual Security Key'.



8. Enter the 6-digits OTP access code into the Security Key Verification

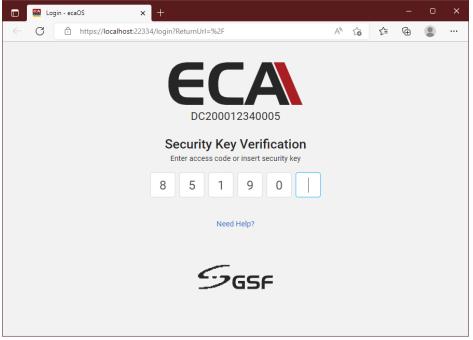


Figure 13: ecaOS Dashboard Login Page



### 7.1.3 Remotely Access ecaOS

Open web browser from remote computer. Enter the IP address of the ECA the address bar, following this URL format:

https://<ipaddress>

Example: https://10.0.0.39

Alternatively, you may insert the ECA's serial number at the browser's address bar, by following this format:

https://<ECA serial number>

Example: https://DC200012340005

Default access port number for the dashboard is '443. This port number is changeable in the Dashboard configuration.

#### 1. Click 'Advanced'

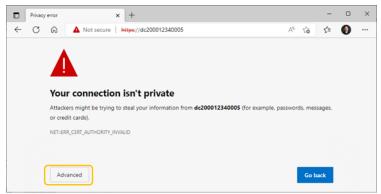


Figure 14: Dashboard Remote Access (1 of 2)

2. Click the link 'Continue to dcxxxxxxxxx (unsafe)'

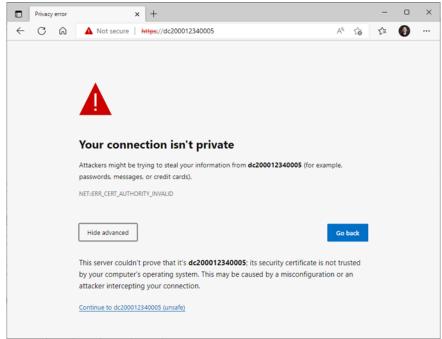


Figure 15: Dashboard Remote Access (2 of 2)



# 7.2 ecaOS Dashboard → Summary

The summary Dashboard page able to offers overall information and system vitals of the ECA machine status. Example of information and status display on the Dashboard are:

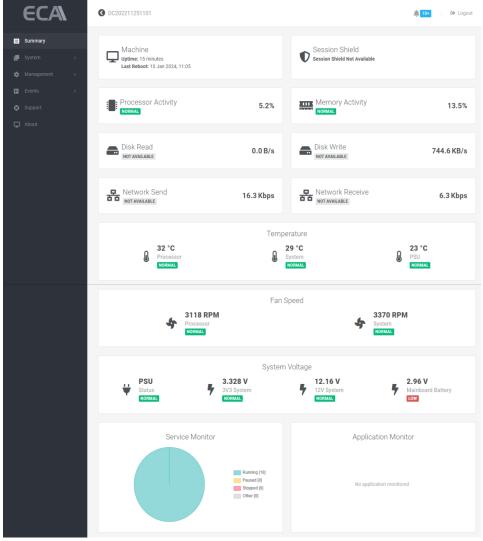


Figure 16: ecaOS Dashboard Summary



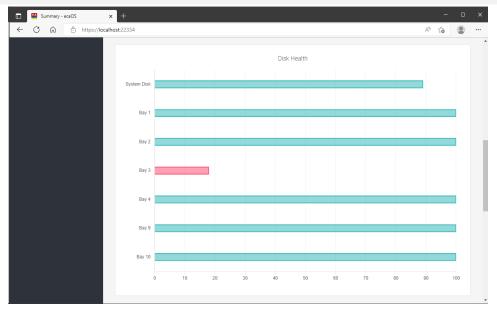


Figure 17: ecaOS Dashboard Summary - Disk Health

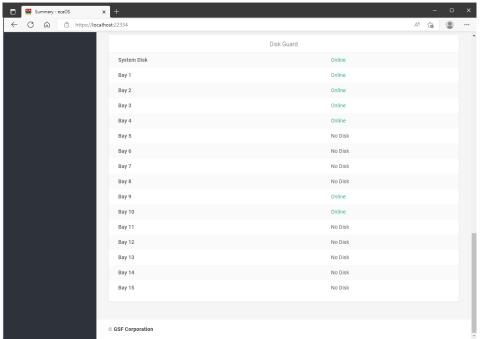


Figure 18: ecaOS Dashboard Summary - Disk Guard




# 8 System


## 8.1 System Monitor

With System Monitor, users can view a list of current Processor Temperature, Mainboard Temperature, PSU Temperature\*, Processor Fan speed, System Fan speed, 3V3 System Voltage, 12V System Voltage & Mainboard Battery Voltage.

\*ONLY applies to ECA45 with TBSP-ECAPSU-R600 power supply unit (PSU).

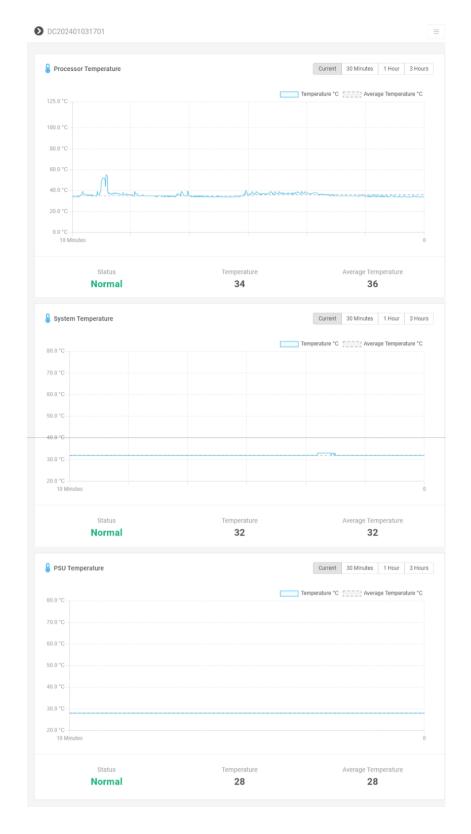



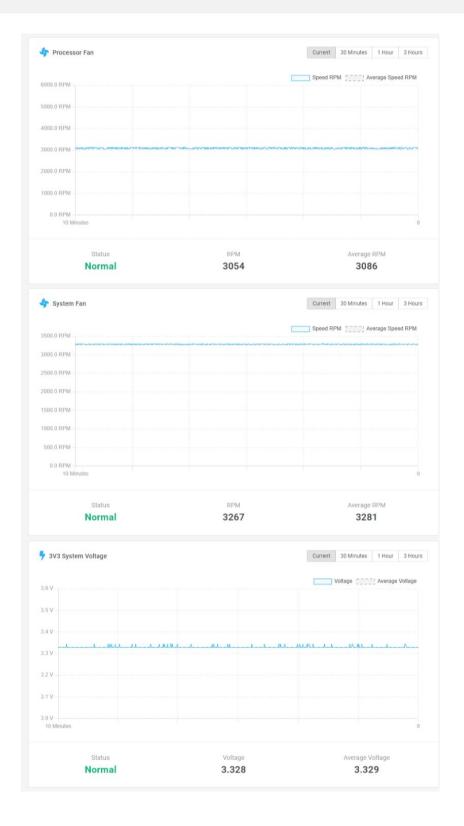



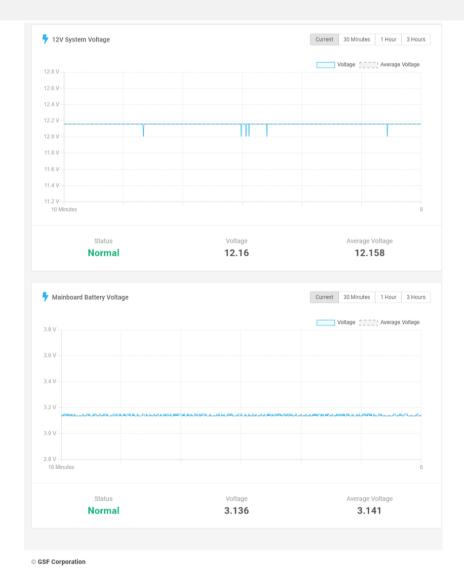


Figure 19: System Monitor Summary



## 8.2 Service Monitor

The tools will be displaying the status of all services in the ecaOS that have been added into Service Monitor.

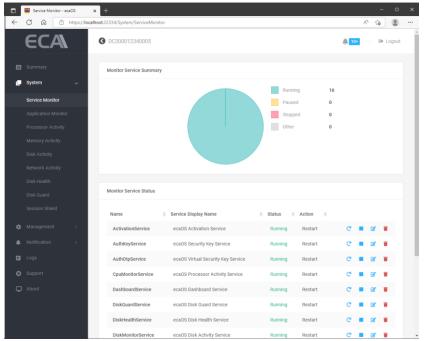


Figure 20: Service Monitor Summary

### 8.2.1 Add Services

1. To add services, click the + Add Service button.

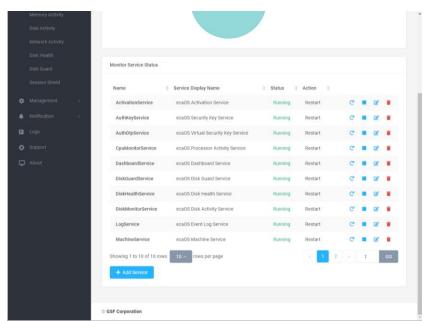


Figure 21: Add Services

2. Click the drop-down button.



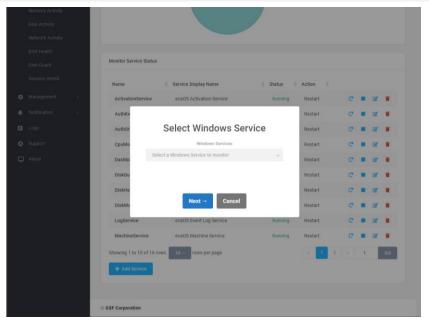


Figure 22: Select Windows Services (1 of 4)

3. Select the services to be added into Service Monitor.

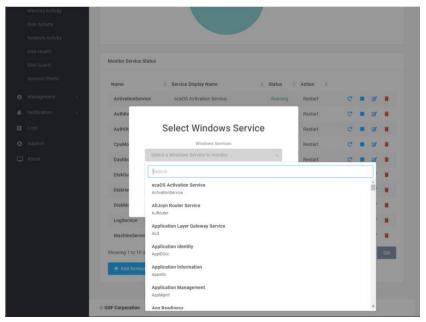


Figure 23: Select Windows Services (2 of 4)



4. Click Next - button

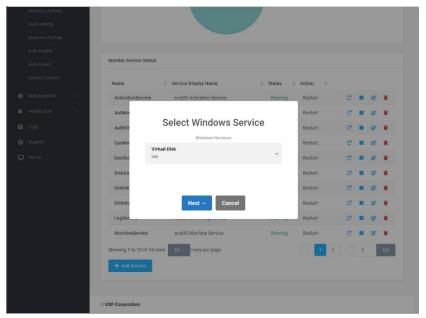


Figure 24: Select Windows services (3 of 4)

5. Select the actions that Service Monitor should perform when the services stop working. Click save to save the setting.

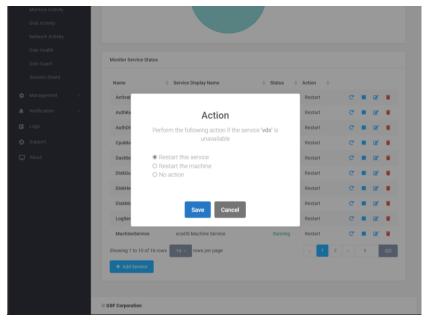


Figure 25: Select Windows Services (4 of 4)



### 8.2.2 Delete Services

1. To delete services, click the button of the service to be delete

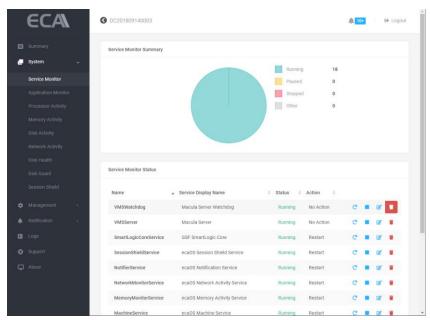


Figure 26: Delete Services (1 of 2)

1. Click on located to proceed with the deletion

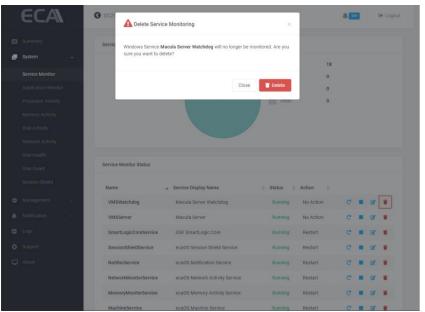


Figure 27: Delete Services (2 of 2)



# 8.3 Application Monitor

The tools will be displaying the status all application that added in 'Application Monitor'. Set the application to auto start after login to OS environment and terminate any instance running at the same time.

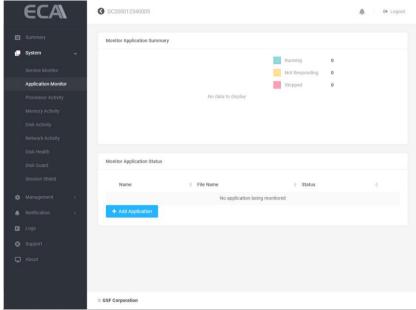


Figure 28: Application Monitor (1 of 5)

## 8.3.1 Add Application

- 1. To add application, click the + Add Application button
- 2. Enter the application name

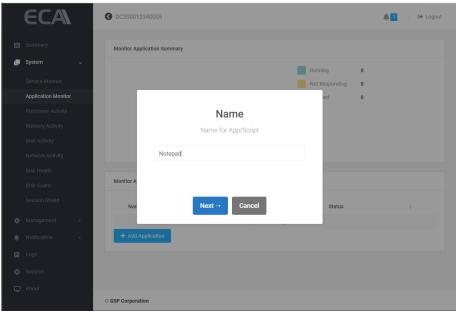


Figure 29: Application Monitor (2 of 5)

3. Paste the path of the application to be added.



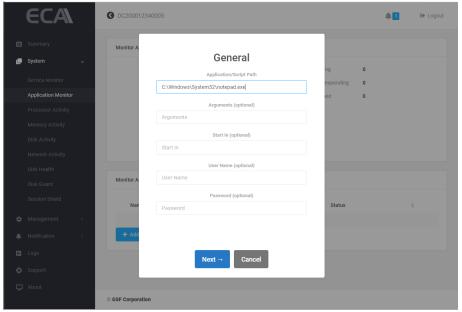


Figure 30: Application Monitor (3 of 5)

### 4. Apply setting

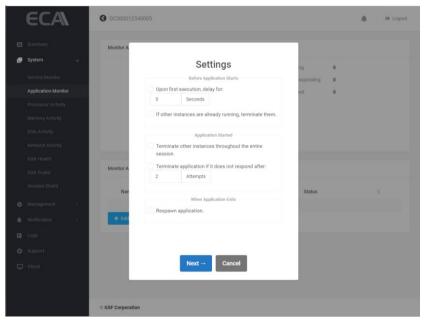


Figure 31: Application Monitor (4 of 5)



### Upon first execution delay for

Set the delay when for application to start.

#### If other instance(s) already running, terminate it

Another instance will be terminated before 'Upon First Execution' started.

#### Terminate other instance(s) throughout the entire session

Another instance will be terminated

### Terminate application if not responding

Application will terminate after number of attempts

#### **Respawn Application**

The application will respawn if it close

5. After successfully add the application to be monitor. The application status will appear in the 'Application Monitor' page.

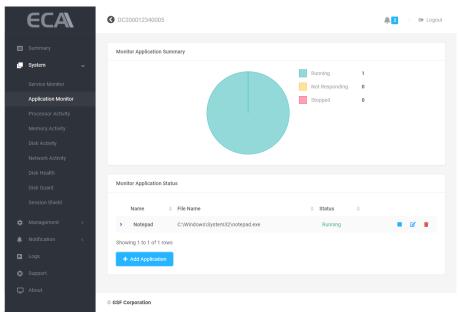


Figure 32: Application Monitor (5 of 5)



## 8.3.2 Delete Application

2. To delete application to be monitor, click the 

button of the application to be delete

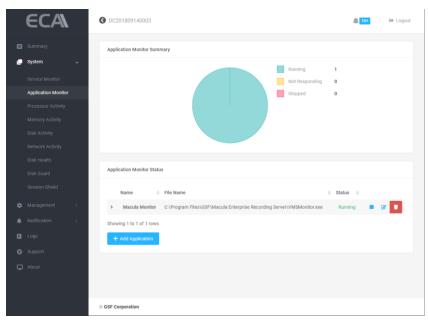


Figure 33: Delete monitored application (1 of 2)

2. Click on To proceed with the deletion

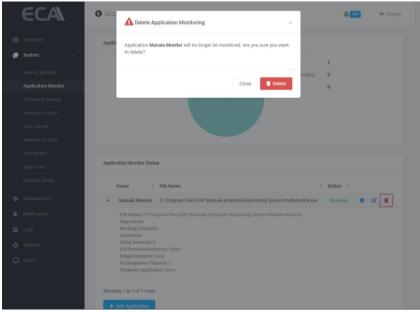


Figure 34: Delete monitored application (2 of 2)



## 8.4 Processor Activity

This application monitors the CPU usage and notify/email if the usage above the threshold value. ecaOS can generate notification to alert user when ECA CPU Alert utilization goes above the configured threshold for a pre-defined period.

**CPU Activity:** The status will base on Average CPU Utilization. The status will change to High if the Average CPU Utilization higher than threshold set under Processor Activity Monitor.

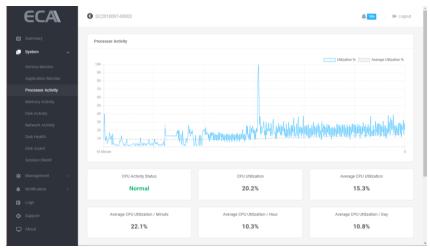


Figure 35: Processor Activity (1 of 2)

By the example below to demonstrate that the Processor Activity Monitor set to enable, the threshold set to 80% for 10 minutes. The CPU Activity status will change to High if the Average CPU Utilization higher than 80% for more than 10 minutes. This event will notify by email and at the notification.

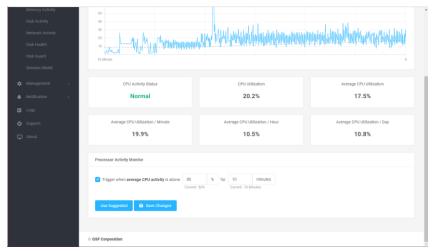


Figure 36: Processor Activity (2 of 2)

#### NOTE:

- Click on 'Use Suggested' for reference value calculate by the system.
- For email and notification setting, go to Events
- Example email of the CPU activity event in the <u>Appendix Processor Activity</u>



## 8.5 Memory Activity

Monitor the memory usage and notify/email if the usage above the threshold value. ecaOS can generate notification to alert user when ECA Memory utilization goes above the configured threshold for a pre-defined period.

**Memory Activity:** The status will base on Average Memory Usage. The status will change to High if the Average Memory Usage higher than threshold set under Memory Activity Monitor.

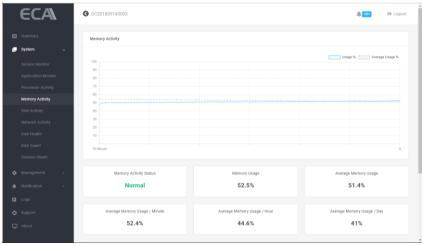


Figure 37: Memory Activity (1 of 2)

By the example below to demonstrate that the Memory Activity Monitor set to enable, the threshold set to 80% for 10 minutes. The Memory Activity status will change to High if the Average Memory Utilization higher than 80% for more than 10 minutes. This event will notify by email and at the notification.

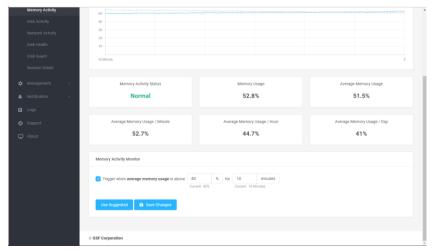


Figure 38: Memory Activity (2 of 2)

#### NOTE:

- Click on 'Use Suggested' for reference value calculate by the system.
- For email and notification setting, go to <u>Events</u>
- Example email of the Memory activity event in the <u>Appendix Memory Activity</u>



## 8.6 Disk Activity

It displays real time disk usage (activity), it also auto calculates average disk usage per minute, per hour and per day. Automatic alert if disk write or read is fall or raise above threshold limit for a period. This is very useful if recording function in the VMS software was accidentally turned off. There will be no disk write activity when recording was turned off, thus the system will auto alert potential CCTV no recording to user.

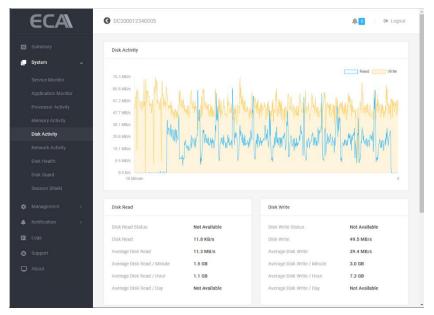


Figure 39: Disk Activity (1 of 2)

By the example below to demonstrate that the Disk Activity Monitor set to enable for both read & write.

The Average Disk read set to above 10GB/s for 10 minutes. The average disk write is below 15GB/s for 10 minutes. This event will notify by email and at the notification if exceed the set threshold.

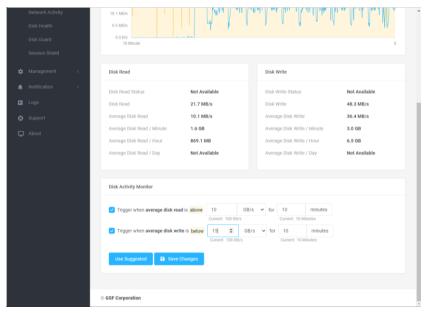


Figure 40: Disk Activity (2 of 2)

#### NOTE:

Click on 'Use Suggested' for reference value calculate by the system.



- For email and notification setting, go to <u>Events</u>
- Example email of the Disk activity event in the <u>Appendix Disk Activity</u>



## 8.7 Network Activity

Network Activity displays real time network usage activity. It can automatically calculate average network utilization per minute, per hour or per day. This average value is important for the estimation and observation of network utilization, as incoming throughput from the network cameras or video sources varies throughout the day, where daytime throughput is usually higher than nighttime.

Automatic alert if network received or sending is fall or raise above threshold limit for a period of time. This is very useful if some of the cameras was accidentally offline due to faulty PoE switch.

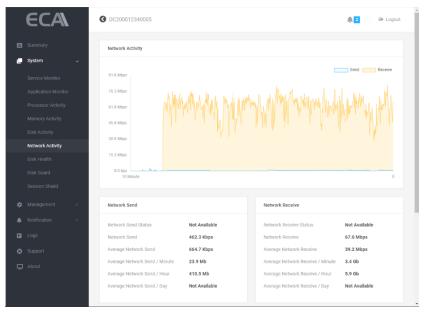


Figure 41: Network Activity (1 of 2)

By the example below to demonstrate that the Network Activity set to trigger email & desktop notifications.

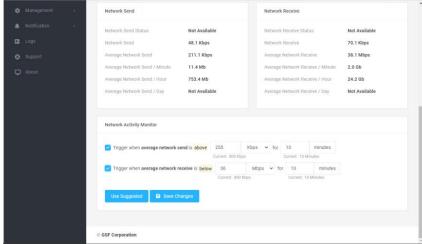


Figure 42: Network Activity (2 of 2)

It will trigger when the data send over network above 255Kbps for 10 minutes

It will trigger when the data receive below set threshold 36Mbps for 10 minutes

#### NOTE:



- Click on 'Use Suggested' for reference value calculate by the system.
- For email and notification setting, go to <u>Events</u>
- Example email of the Network activity event in the Appendix Network Activity



### 8.8 Disk Health

'Disk Health' able to show information of individual disk connected to ECA. 'Disk Health' also monitor disk status and notify whenever detected the health below certain threshold.

Oversee disk information and health such as, disk health, SMART value, temperature, drive ware level, power up hours, capacity, model and serial numbers, etc.

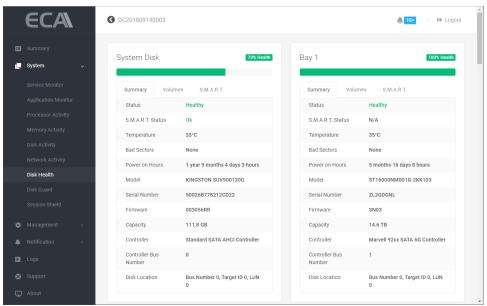


Figure 43: Disk Health (1 of 3)

Under Summary tab, can found drive information such health status, bad sector, temperature, model etc.

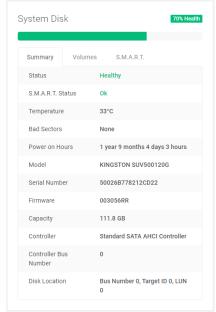


Figure 44: Disk Health - Healthy Disk (2 of 3)



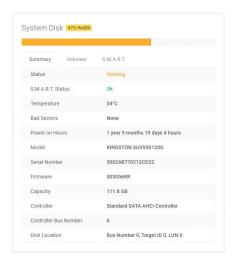


Figure 45: Disk Health – Warning Status Disk (2 of 3)

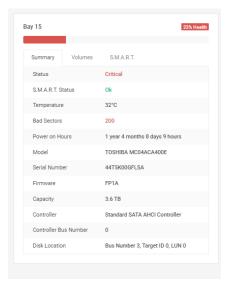


Figure 46: Disk Health - Critical Status Disk with Bad Sectors (2 of 3)



Under Volume, display partition & free space available information

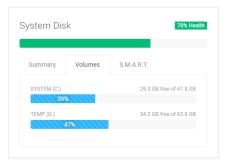


Figure 47: Disk Health (3 of 3)

Under S.M.A.R.T (Self-Monitoring, Analysis and Reporting Technology), will display S.M.A.R.T value. Its primary function is to detect and report various indicators of drive reliability with the intent of anticipating imminent hardware failures.

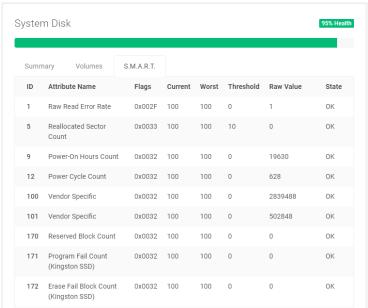


Figure 48: Disk Health (3 of 3)

### NOTE:

- Click on 'Use Suggested' for reference value calculate by the system.
- For email and notification setting, go to <u>Events</u>
- Example email of the Disk Health event in the Appendix Disk Health



### 8.9 Disk Guard

Display status all connected hard disk to the ECA.

HDD stores important video evidence data. It is important to ensure the data remains intact in the ECA. Disk Guard monitors HDD insertion and removal events on the ECA.

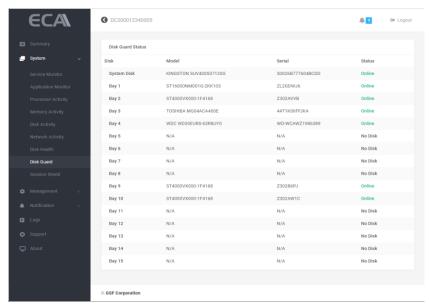


Figure 49: Disk Guard

Disk list shown depending on the ECA model:

- ECA-FX44: System Disk, Bay 1 Bay 15
- ECA-EX44: System Disk, Bay 1 Bay 10 & HD1
- ECA-DX44: System Disk, Bay 1 Bay 5, HDD1, HDD 2
- ECA-MX44: System Disk, HDD1, HDD 2
- ECA-VW44: System Disk, HDD1, HDD 2

#### Status:

- Online: Hard disk installed. Using by OS
- Offline: Hard disk installed. Not using by OS
- No Disk: No hard disk installed.
- Removed: Previous hard disk has been removed.
- Replaced: Hard disk has been replaced with different serial number.

### NOTE:

- System Disk is the drive containing operating system.
- Hard disks insert in the hotswap bay will label shows as a 'Bay'.
- Internal hard disk will label HDD1 & HDD2 is for the internal hard disk.
- When hard disk removed, the hard disk information still shown with 'Removed' status.
   Acknowledge the removed hard disk will change to latest status.



- For email and notification setting, go to <u>Events</u>
- Example email of the Disk Guard event in the <u>Appendix Disk Guard</u>



## 8.9.1 Hard disk change during ECA Power Off

Dashboard will be sending notification via email to inform there is hard disk changing during ECA off stage (power off). This feature is part of Disk Guard, to protect the Data/Evidence, ensure the same serial number was in the ECA machine before and after power on.

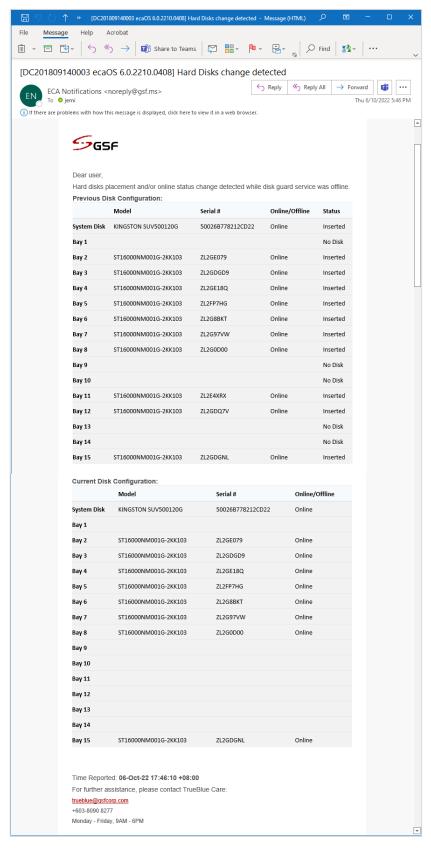


Figure 51: Hard Disks change detected (1 of 1)



## 8.10 Session Shield

Session shield which permanently stores all modifications into the User Layer. Without doing so, all modifications of settings, software, or Windows, are temporary only, and will be discarded once the ECA is powered off or reboot.

Total size availability will be half of the amount of the RAM.

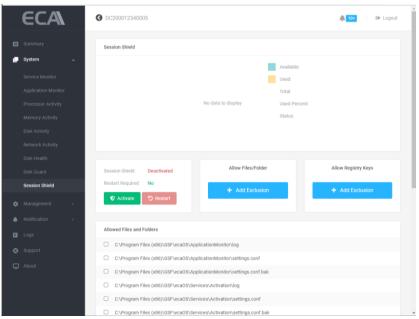


Figure 52: Session Shield

### 8.10.1 Activate Session Shield

All setting/files in the 'C:\' will be protected. All setting/files will be return to its original state after reboot the ECA.

1. Click on 'Activate'

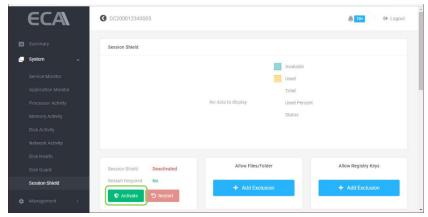


Figure 53: Activate Session Shield (1 of 5)

2. Click 'Change Settings' to save the setting



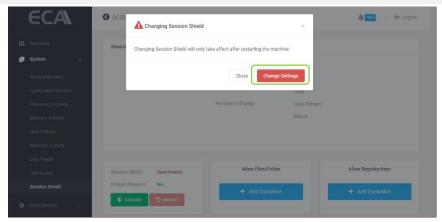


Figure 54: Activate Session Shield (2 of 5)

3. Click 'Restart' to reboot ECA and apply the setting.

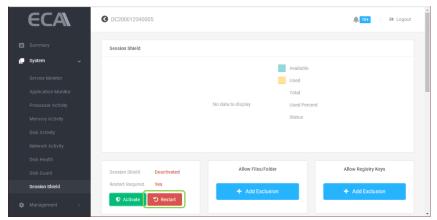


Figure 55: Activate Session Shield (4 of 6)

4. Type Restart then click 'Restart' button

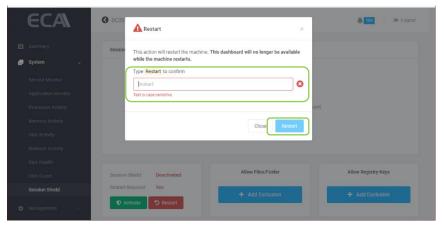


Figure 56: Activate Session Shield (5 of 6)

5. Once the Session Shield successfully activated. The Session Shield information shown as below



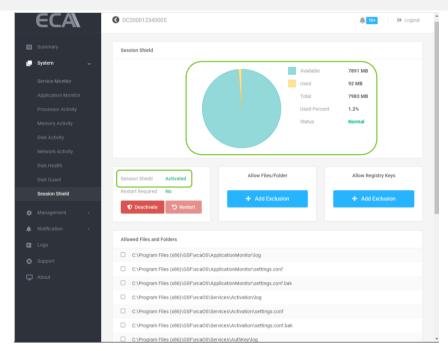


Figure 57: Activate Session Shield (6 of 6)



### 8.10.2 Deactivate Session Shield

All setting/files in the 'C:\' will not be protected. All files setting will be permanently written.

1. Click on 'Deactivate'

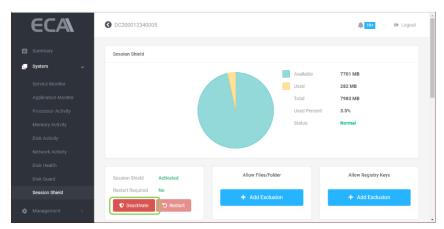


Figure 58: Deactivate Session Shield (1 of 3)

2. Click 'Change Settings' to save the setting

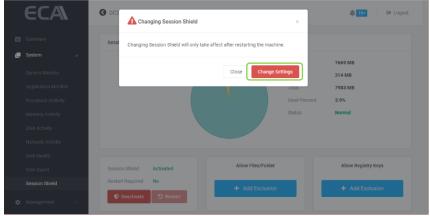


Figure 59: Deactivate Session Shield (2 of 3)

3. Click 'Restart' to reboot ECA and apply the setting



Figure 60: Deactivate Session Shield (2 of )

4. Type Restart then click 'Restart' button



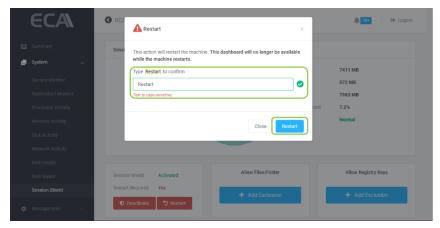


Figure 61: Deactivate Session Shield (3 of 3)

#### 8.10.3 Exclusion List

All paths below will not be affected when Session Shield is activated. The data destined to these paths will be able to pass-through and written permanently:

```
C:\Program Files (x86)\GSF\ecaOS\ProcessMonitor\log
C:\Program Files (x86)\GSF\ecaOS\ProcessMonitor\settings.conf
C:\Program Files (x86)\GSF\ecaOS\ProcessMonitor\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\Activation\log
C:\Program Files (x86)\GSF\ecaOS\Services\Activation\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\Activation\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\AuthKey\log
C:\Program Files (x86)\GSF\ecaOS\Services\AuthKey\settings.conf
C:\Program Files (x86)\GSF\eca0S\Services\AuthKey\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\AuthOtp\log
C:\Program Files (x86)\GSF\ecaOS\Services\AuthOtp\settings.conf
C:\Program Files (x86)\GSF\eca0S\Services\AuthOtp\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\HB2Gateway\log
C:\Program Files (x86)\GSF\ecaOS\Services\HB2Gateway\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\HB2Gateway\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\Log\log
C:\Program Files (x86)\GSF\ecaOS\Services\Log\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\Log\settings.conf.bak
C:\Program Files\Microsoft SQL Server\MSSQL15.SQLEXPRESS\MSSQL\DATA
C:\Program Files (x86)\GSF\ecaOS\Services\Machine\log
C:\Program Files (x86)\GSF\ecaOS\Services\Machine\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\Machine\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\WindowsServiceMonitor\log
C:\Program Files (x86)\GSF\ecaOS\Services\WindowsServiceMonitor\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\WindowsServiceMonitor\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\SessionShield\log
C:\Program Files (x86)\GSF\ecaOS\Services\SessionShield\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\SessionShield\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\CPUMonitor\log
C:\Program Files (x86)\GSF\ecaOS\Services\CPUMonitor\Db
C:\Program Files (x86)\GSF\ecaOS\Services\CPUMonitor\appsettings.cpu_activity.json
C:\Program Files (x86)\GSF\ecaOS\Services\MemoryMonitor\log
C:\Program Files (x86)\GSF\ecaOS\Services\MemoryMonitor\Db
C:\Program Files (x86)\GSF\ecaOS\Services\MemoryMonitor\appsettings.memory_activity.json
C:\Program Files (x86)\GSF\ecaOS\Services\NetworkMonitor\log
C:\Program Files (x86)\GSF\ecaOS\Services\NetworkMonitor\Db
 \verb|C:\Pr| or am Files (x86) GSF\eca0S\Services Network Monitor\appsettings.network_activity.json | for all the first of the properties of the formal of the formal of the properties of the formal of 
C:\Program Files (x86)\GSF\ecaOS\Services\DiskMonitor\log
C:\Program Files (x86)\GSF\ecaOS\Services\DiskMonitor\Db
C:\Program Files (x86)\GSF\ecaOS\Services\DiskMonitor\appsettings.disk_activity.json
C:\Program Files (x86)\GSF\ecaOS\Services\DiskHealth\log
C:\Program Files (x86)\GSF\ecaOS\Services\DiskHealth\Db
C:\Program Files (x86)\GSF\ecaOS\Services\DiskHealth\appsettings.disk_health.json
C:\Program Files (x86)\GSF\ecaOS\Services\Support\log
C:\Program Files (x86)\GSF\ecaOS\Services\Support\Db
C:\Program Files (x86)\GSF\ecaOS\Services\Support\appsettings.support.json
C:\Program Files (x86)\GSF\ecaOS\Services\DiskGuard\log
C:\Program Files (x86)\GSF\ecaOS\Services\DiskGuard\Db
C:\Program Files (x86)\GSF\ecaOS\Services\Notifier\log
```



```
C:\Program Files (x86)\GSF\ecaOS\Services\Notifier\Db
C:\Program Files (x86)\GSF\ecaOS\Services\Dashboard\log
C:\Program Files (x86)\GSF\ecaOS\Services\Dashboard\Db
C:\Program Files (x86)\GSF\ecaOS\Services\Dashboard\appsettings.json
C:\Windows\System32\config\systemprofile\AppData\Roaming\.smartlogic
C:\Program Files\Windows Defender
C:\ProgramData\Microsoft\Windows Defender
C:\Windows\WindowsUpdate.log
C:\Windows\System32\winevt\Logs
C:\Windows\Logs
C:\Windows\assembly
C:\Windows\SoftwareDistribution
C:\Windows\MEMORY.DMP
C:\Users\localadmin\Desktop
C:\Users\localadmin\Documents
C:\Users\localadmin\Downloads
C:\Users\localadmin\Music
C:\Users\localadmin\Pictures
C:\Users\localadmin\Videos
C:\Program Files (x86)\GSF\ecaOS\ApplicationMonitor\log
C:\Program Files (x86)\GSF\ecaOS\ApplicationMonitor\settings.conf
C:\Program Files (x86)\GSF\ecaOS\ApplicationMonitor\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\Support\settings.conf
C:\Program Files (x86)\GSF\ecaOS\Services\Support\settings.conf.bak
C:\Program Files (x86)\GSF\ecaOS\Services\Support\TrueBlue\log
C:\Program Files (x86)\GSF\ecaOS\Services\Support\TrueBlue\Db
C:\Program Files (x86)\Google\Chrome Remote Desktop
C:\ProgramData\Google\Chrome Remote Desktop
```

#### 8.10.4 Add Exclusion Files or Folder

New files or folder can be added in the Exclusion List will be allowed to be written permanently when the 'Session Shield' is activated.

1. Click 'Add Exclusion' to add new file/folder



Figure 62: Allow Files/Folder (1 of 3)

2. Type or paste the new files/folder path to be include and click 'Exclude'



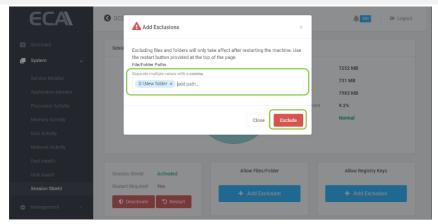


Figure 63: Allow Files/Folder (2 of 3)



Figure 64: Allow Files/Folder (3 of 3)

### 8.10.5 Delete Exclusion Files or folder

 Tick the check box which files/folder to be delete from the exclusion list and click 'Delete Selected'

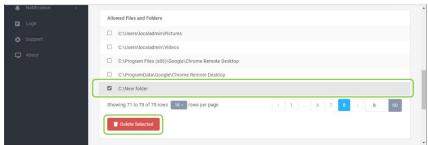


Figure 65: Delete Files/Folder (1 of 3)

2. Click 'Delete Exclusion' to confirm the operation



Figure 66: Delete Files/Folder (2 of 2)

## 8.10.6 Add Registry Keys

Allow to be written permanently when the 'Shield' is activated.



1. Click 'Add Exclusion' to add registry keys

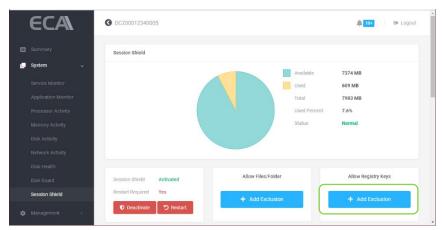


Figure 67: Allow Registry Keys (1 of 2)

2. Type or paste the registry key to be include and click 'Exclude'

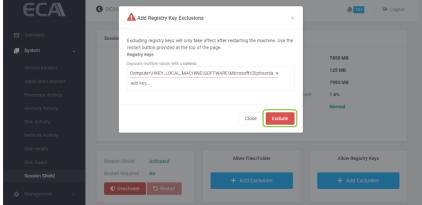


Figure 68: Allow Registry Keys (1 of 2)



## 8.10.7 Delete Exclusion Registry Key

 Tick the check box which registry key to be delete from the exclusion list and click 'Delete Selected'



Figure 69: Delete Registry Key (1 of 2)

2. Click 'Delete Exclusion' to confirm the operation

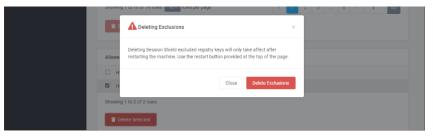


Figure 70: Delete Registry Key (2 of 2)

## 8.10.8 Status: Warning

Session shield status will turn to 'Warning' state when the used amount of space exceeds 80% of total space.

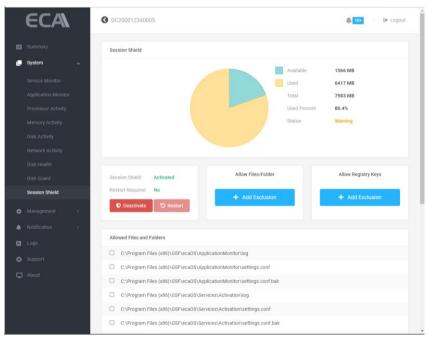


Figure 71: Warning Status

### 8.10.9 Status: Critical

Session shield status will turn to 'Critical state when the used amount of space exceeds 90% of total space. The ECA will be start the counter and restart in few minutes.



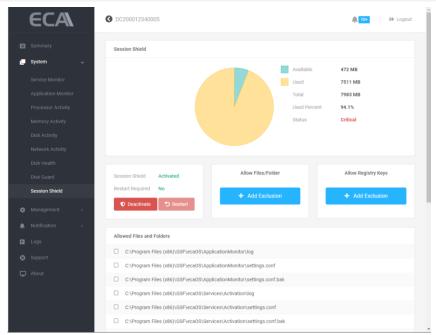


Figure 72: Critical Status



### 8.11 Device Monitor

Device Monitor is a tool to monitor the uptime percentage of a device of interest using HTTP, Keyword, Port or Ping methods.

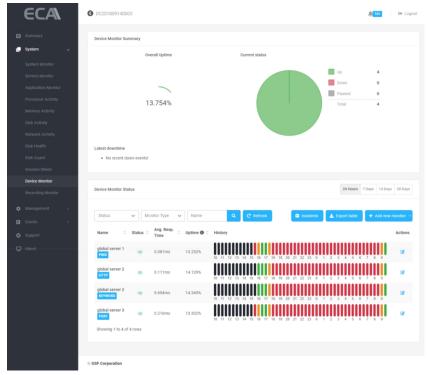


Figure 73: Device Monitor

### 8.11.1 Add New Monitor

1. Click the 'Add new monitor".



Figure 74: Add new monitor

- 2. Choose the desired monitor type under "Add monitor details."
- 3. HTTP monitors a web server using HTTP or HTTPS. GET, POST, HEAD, and OPTIONS are supported HTTP methods.
  - a. Type in the hostname or IP and monitor name.
  - b. Pick the appropriate HTTP Method. (GET Method by default)
  - c. Set the Monitoring Interval. (by default, five minutes)
  - d. Press the Submit button.





Figure 75: Monitor type - HTTP

- 4. Keyword monitors a web server (HTTP or HTTPS) using keyword.
  - a. Type in the hostname or IP and monitor name.
  - b. Enter a keyword to monitor. (Case-sensitive by default)
  - c. Set the Monitor Up when keyword "Found or "Not Found" (default: Found)
  - d. Set the Monitoring Interval. (by default, five minutes)
  - e. Press the Submit button.

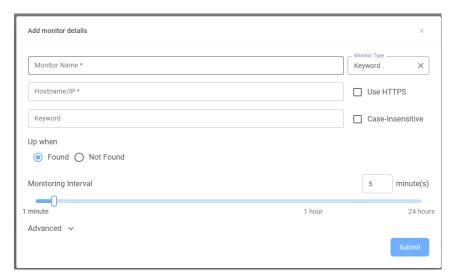


Figure 76: Monitor type - Keyword

- 5. Ping sends an "ICMP" echo request ("ping") to the device to monitor its availability.
  - a. Type in the Monitor name & Hostname/IP
  - b. Set the Monitoring Interval. (by default, five minutes)
  - c. Press the Submit button.





Figure 77: Monitor type - Ping

- 6. Port monitors a network service by connecting to its port.
  - a. Type in the Monitor name, Hostname/IP & Port number.
  - b. Set the Monitoring Interval. (by default, five minutes)
  - c. Press the Submit button.



Figure 78: Add Device Monitor – Port type

### 8.11.2 Delete Monitor

1. Click 'v' icon and select 'Delete monitors'.



Figure 79: Delete Device Monitors (1 of 2)

- 2. Select the monitor to delete and type 'Delete'.
- 3. Press the 'Delete' button.



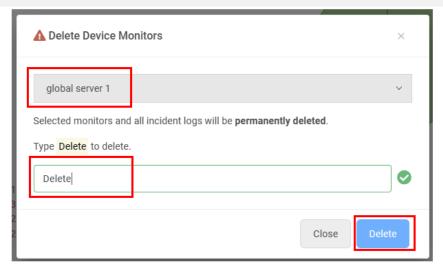


Figure 80: Delete Device Monitors (2 of 2)

# 8.12 Recording Monitor

The Recording Monitor is a tool for monitoring the channels recording status of the Macula VMS.

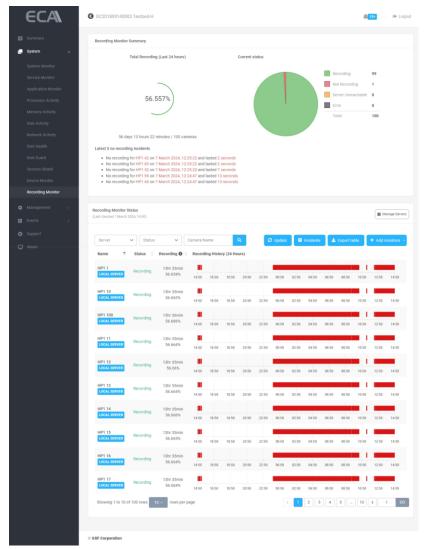


Figure 81: Device Monitor



#### 8.12.1 Add New Monitor

1. Click 'Manage Servers' button.



Figure 82: Add VMS server (1 of 3)

2. Click 'Add Server'.



Figure 83: Add VMS server (2 of 3)

3. Enter VMS's hostname/IP, port, and login information. Please ensure that the user has the channel's 'video playback' and 'Login via HTTP' permissions.

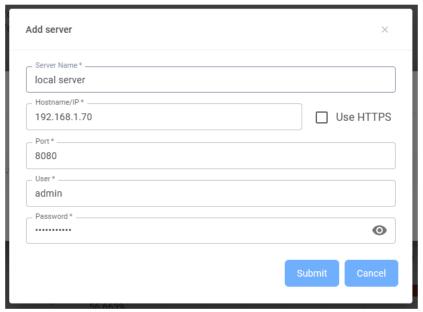


Figure 84: Add VMS server (3 of 3)

4. Click 'Add monitors.



Figure 85: Add monitors (1 of 2)

5. In 'Add monitor', choose a server and channels to monitor. Then press 'Add' button.



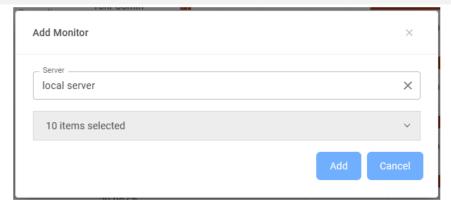


Figure 86: Add monitors (2 of 2)

#### 8.12.2 Delete Monitors

1. Click 'v' icon and select 'Delete monitors'.

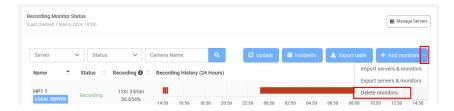


Figure 87: Delete Recording Monitors (1 of 2)

- 2. Select the monitor(s) to delete and type 'Delete'.
- 3. Press the 'Delete' button.

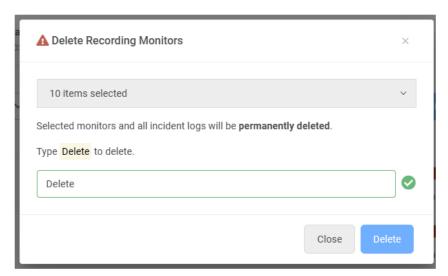


Figure 88: Delete Recording Monitors (2 of 2)



# 9 Management

## 9.1 General

Under Machine Control to Reboot or Shutdown ECA. Layer Management to save current layer as a backup layer. Backup layer can be deployed (Soft Reset & Hard Reset) in the future to restore previous setting.

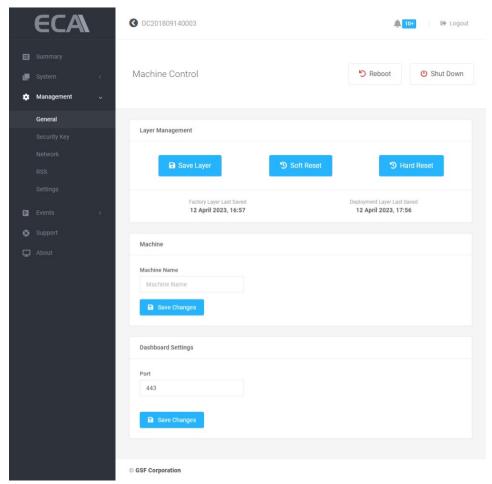


Figure 89: General

#### 9.1.1 Authorize Restart

Only restart through the Dashboard will consider as authorize restart.

1. Click on 'Restart'

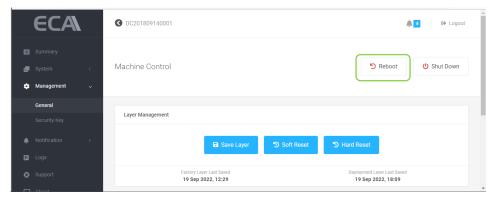


Figure 90: Authorize Restart (1 of 2)

2. Type **Restart** then click 'Restart' button



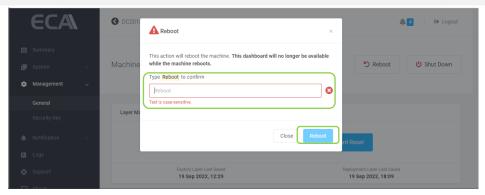


Figure 91: Authorize Restart (2 of 2)

#### 9.1.2 Authorize Shutdown

To shutdown ECA, only through the Dashboard will consider as authorize restart. Shutdown ECA not via dashboard will consider as unauthorize shutdown. HB will reboot the ECA.

1. Click on 'Shut Down'

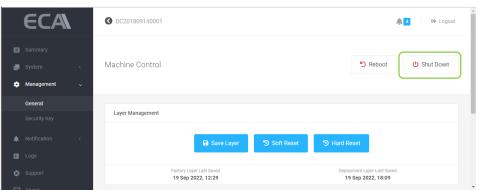


Figure 92: Authorize Shut Down (1 of 2)

2. Type **Shutdown** then click 'shutdown' button

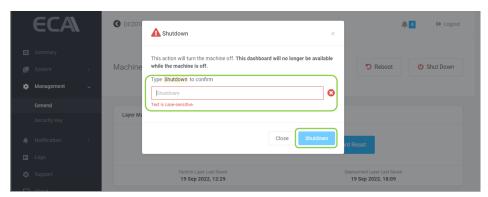


Figure 93: Authorize Shut Down (2 of 2)



### 9.1.3 Saving & Deploy Layer

It is recommended to perform 'Save Layer' for any changes under system including video management software such as added new camera.

#### **9.1.3.1** Save Layer

Save current user working layer as a deployment layer. This layer will content all current working setting. If in the future suddenly the OS corrupt, this layer can recall (Soft Reset) to deploy previous working state.

#### NOTE:

Performing Save Layer, Soft Reset & Hard Reset will cause the downtime of the ECA means there will no recording & accessing to Dashboard not available during this period until the ECA complete the layer saving and reboot back to ecaOS.

1. Click on 'Save Layer'

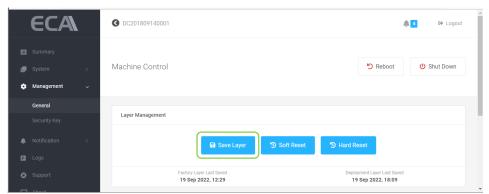


Figure 94: Save Layer (1 of 5)

2. ECA will reboot and go to Layer Manager.



Figure 95: Save Layer (2 of 5)



Saving layer will be start after 10 seconds countdown. To cancel the operation, click on Cancel



Figure 96: Save Layer (3 of 5)

4. Saving layer in progress show with percentage

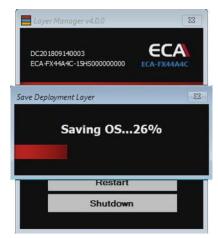


Figure 97: Save Layer (4 of 5)

5. ECA will reboot to ecaOS after complete saving layer.



Figure 98: Save Layer (5 of 5)



#### 9.1.3.2 Soft Reset

Deploy deployment layer and replace current working with previous save setting.

1. Click on 'Soft Reset'

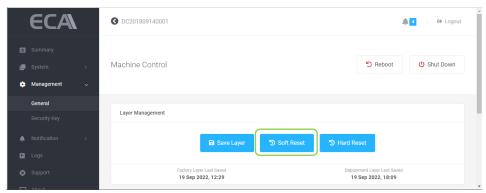


Figure 99: Soft Reset (1 of 5)

6. ECA will reboot and go to Layer Manager.



Figure 100: Save Layer (2 of 5)

7. Restoring Deployment layer will be start after 10 seconds countdown. To cancel the operation, click on Cancel



Figure 101: Save Layer (3 of 5)



8. Restoring layer in progress show with percentage



Figure 102: Save Layer (4 of 5)

9. ECA will reboot to ecaOS after complete saving layer.



Figure 103: Save Layer (5 of 5)



#### 9.1.3.3 Hard Reset

Deploy default layer saved from factory.

**NOTE:** All setting previously done on site will not available after Hard Reset. Only perform Hard Reset when Soft Reset failed.

1. Click on 'Hard Reset'



Figure 104: Soft Reset (1 of 2)

10. ECA will reboot and go to Layer Manager.



Figure 105: Save Layer (2 of 5)

11. Restoring Factory layer will be start after 10 seconds countdown. To cancel the operation, click on Cancel



Figure 106: Save Layer (3 of 5)



#### 12. Restoring layer in progress show with percentage



Figure 107: Save Layer (4 of 5)

13. ECA will reboot to ecaOS after complete saving layer.



Figure 108: Save Layer (5 of 5)



# 9.1.3.4 Last Saved Layer Information

Display the last date and time of the layer last saved

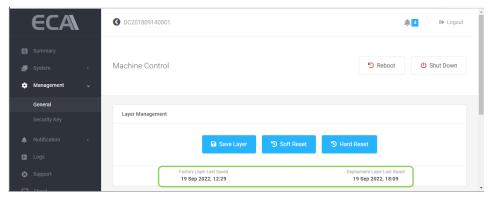


Figure 109: Information about the last saved layer

#### 9.1.4 Machine Name

Assign your ECA a friendly name to make it easier to identify.

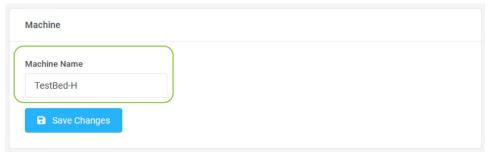


Figure 110: Machine name for ECA

### 9.1.5 Change Dashboard Port

By default, port 443 is use ECA for remotely access Dashboard from another machine via local LAN. Modify this port if the default ports already in use.

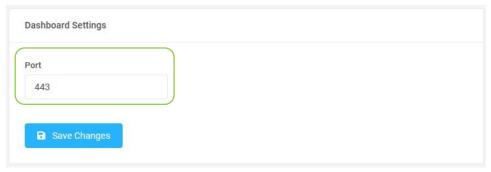


Figure 111: Port settings for Dashboard



# 9.2 Security Key

Each ECA will come with 1 unit of Security key. Any extra Security key or replacement unit require to register the Security Key to access Dashboard.

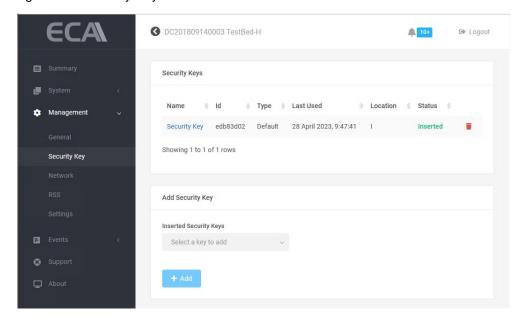


Figure 112: Security Key

### 9.2.1 Register Security Key

- 1. Insert valid Security Key in the USB on the ECA
- 2. Click on the drop-down list and select the key to register.

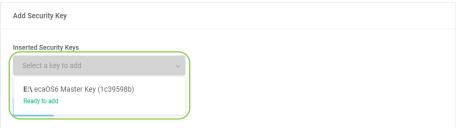


Figure 113: Register security key (1 of 3)

3. Click Add to register

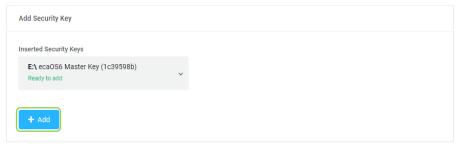


Figure 114: Register security key (2 of 3)



Once successfully added the Security Key. The new security key will show under 'Security keys'

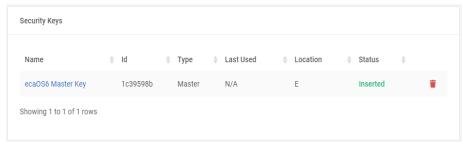


Figure 115: Register security key (3 of 3)

# 9.2.2 Delete Security Key

1. Click on the dustbin icon of the Security key to be delete

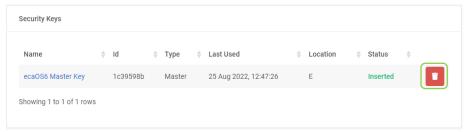


Figure 116: Delete security key (1 of 2)

2. Type in the field Security Key name and click 'Delete Security Key'

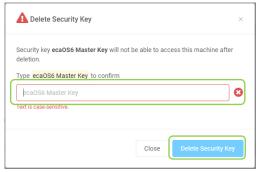


Figure 117: Delete security key (1 of 2)



# 9.2.3 Add Virtual Security Key

1. Click on the 'Add' button under Virtual Security key



Figure 118: Add virtual security key (1 of 5)

2. Click 'Next' button

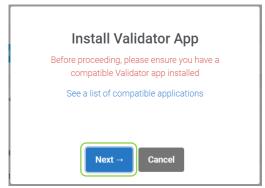


Figure 119: Add virtual security key (2 of 5)

3. Give the new virtual security key a name



Figure 120: Add virtual security key (3 of 5)



4. Scan the QR code using authenticator application on the phone. Type the in the field and click 'Save' button one-time password for example 123456

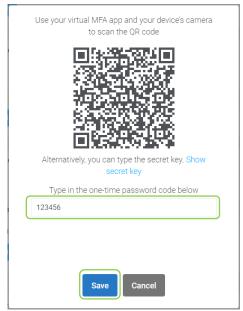


Figure 121: Add virtual security key (4 of 5)

5. The new virtual security key will show under 'Virtual Security keys'

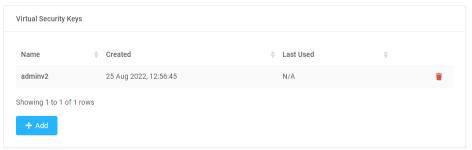


Figure 122: Add virtual security key (5 of 5)



# 9.2.4 Delete Virtual Security Key

1. Click on the dustbin icon the Virtual key to be delete

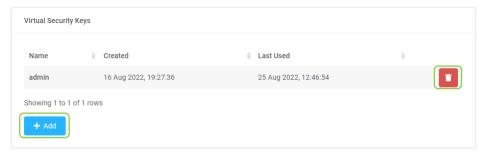


Figure 123: Delete Virtual Security Key (1 of 2)

2. Type 'admin' and click on 'Delete Virtual Security Key' button

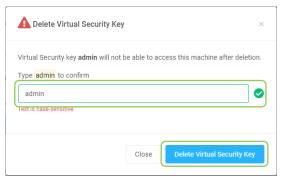


Figure 124: Delete Virtual Security Key (2 of 2)



#### 9.3 Network

All ECA come with GSF DDNS. Network teaming groups multiple physical adapters together to provide better network fault tolerance.

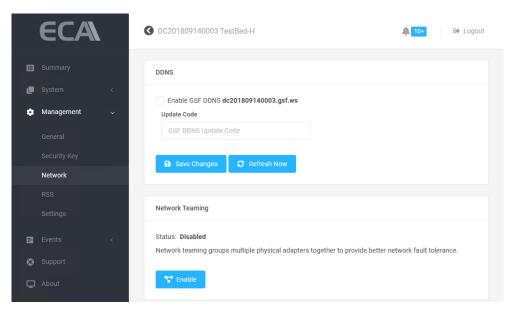


Figure 125: DDNS and Network Teaming

#### 9.3.1 Enable DDNS

- 1. Enable GSF DDNS.
- Enter the correct Update Code and click on 'Save Changes'. Please contact GSF to obtain your update code.

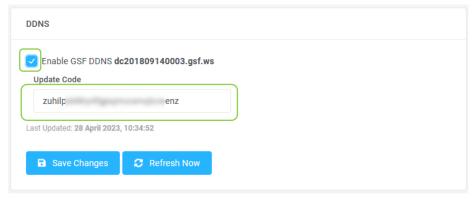


Figure 126: Enable DDNS

### 9.3.2 Enable Network Teaming

1. Click on the 'Enable' button to enable Network Teaming.



Figure 127: Enable Network Teaming



2. Type 'Confirm and click on 'Confirm' button

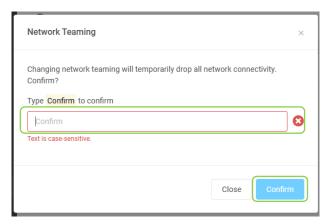


Figure 128: Confirm to enable network teaming

# 9.3.3 Disable Network Teaming

1. Click on the 'Disable' button to disable Network Teaming.

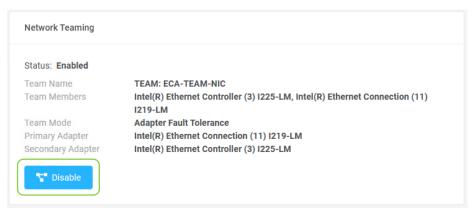


Figure 129: Disable Network Teaming

2. Type 'Confirm and click on 'Confirm' button

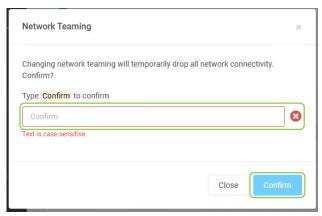


Figure 130: Confirm to disable network teaming



# 9.4 RSS (Redundant Storage System)

RSS can help protect your data from drive failures. It's a technology in ECA and is conceptually similar to redundant array of independent disks (RAID), implemented in software. You can use RSS to group three or more drives into a storage pool and then use capacity from that pool to create Storage Spaces. These drives typically store extra copies of your data, so if one of your drives fails, you still have an intact copy of your data.

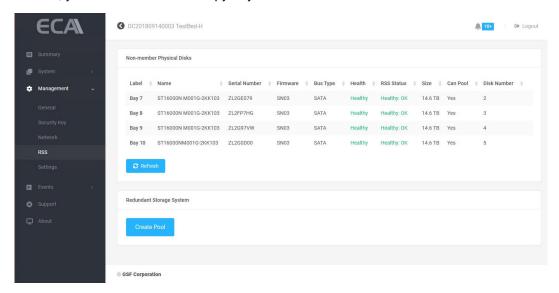


Figure 131: RSS - Redundant Storage System

### 9.4.1 Create Storage Pool

1. Click on the 'Create Pool' button to create pool.



Figure 132: Create Pool

2. Name the storage pool and click on the 'Next' button.



Figure 133: Name storage pool

3. Select the non-member physical disks and click on the 'Next' button to create pool.



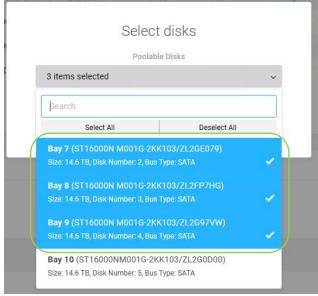


Figure 134: Select disks

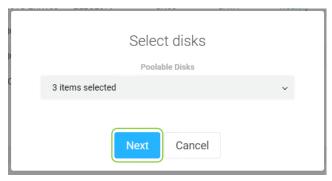


Figure 135: Select disks

4. In Virtual Disk Settings, name the virtual disk and select the Resiliency type. Click on the 'Create Volume' to create volume.

Resiliency type	Fault-tolerance for each storage pool	Minimum number of disks	Disk space efficiency
Simple	0 Disk	1	100%
Two-way Mirror	1 Disk	2	50%
Three-way Mirror	2 Disks	5	33%
Single Parity	1 Disk	3 (recommended 5disk for optimized performance)	Disk Count - 1 Disk Count
Dual Parity	2 Disks	5 (recommended 10disk for optimized performance)	Disk Count - 2 Disk Count

Figure 136: Resiliency type table





Figure 137: Create volume

5. Storage pool and virtual disk health status in RSS.

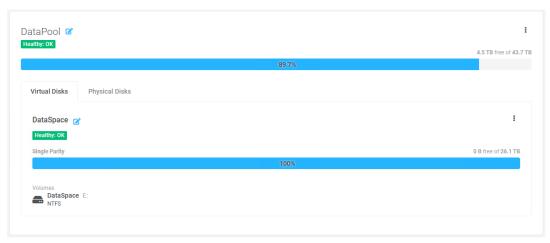


Figure 138: View storage pool, virtual disk health status

# 9.4.2 Delete Storage Pool

1. Click on the '\$' and select 'Delete Pool' to delete the pool.

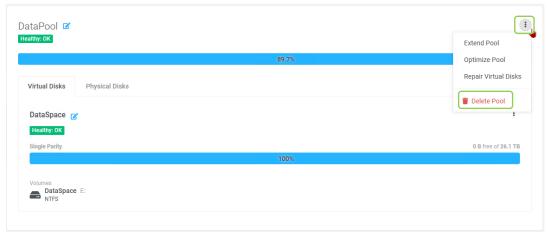


Figure 139: Delete pool

2. Enter storage pool name and click on the 'Delete Pool and Volumes' to delete the pool.



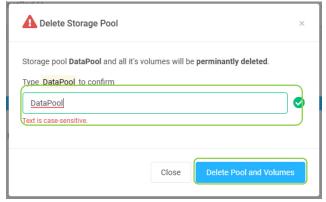


Figure 140: Confirm delete pool

### 9.4.3 Extend Storage Pool

Add a new non-member disk to extend the storage pool.

 Insert a new clean disk into the ECA, it will appear under the Non-member Physical Disks list.

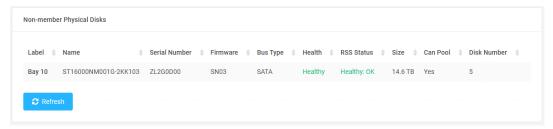


Figure 141: RSS non-member physical disks

2. Click on the 'i' and select 'Extend Pool' to extend the pool.

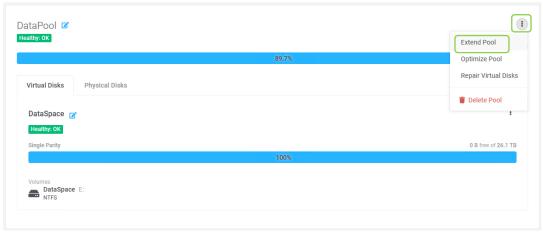


Figure 142: Extend storage pool

3. Enable Optimize storage pool and click on the 'Extend' button to extend the pool.



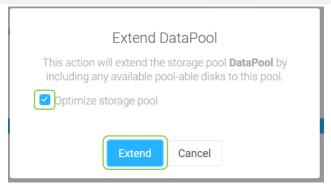


Figure 143: Optimize and extend storage pool

4. Please wait for the ECA to complete the optimization process.

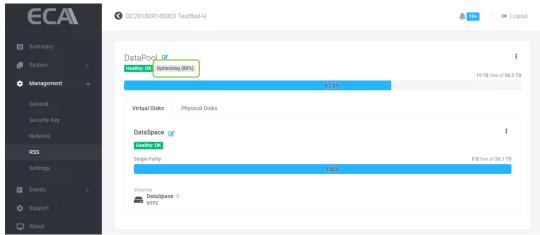


Figure 144: Optimizing storage pool

5. After the RSS optimization process is complete, go to Windows Device Manager to expand the RSS volume.



Figure 145: Extend volume in Disk Management (1 of 2)



Figure 146: Extend volume in Disk Management (2 of 2)

#### 9.4.4 Repair Storage Pool

If any of the RSS member disks are missing or faulty, ecaOS will notify you via email or desktop notification. To repair the storage pool, replace the missing or faulty disk with a new non-member disk.





Figure 147: RSS Degraded

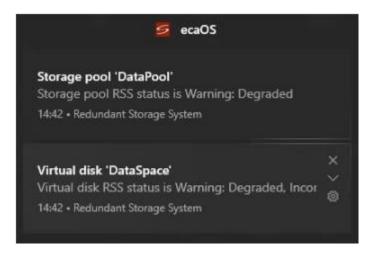


Figure 148: RSS Degraded Desktop notifications

1. To determine which member disks are 'Warning: lost communication,' go to the 'Physical Disks' tab. Then remove the faulty disk from the ECA.

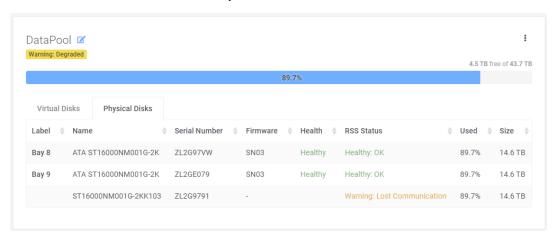


Figure 149: RSS member disk lost communication

2. Insert a new clean disk into the ECA, and then navigate to 'System > Disk Guard' to 'Acknowledge' the new replaced disk.

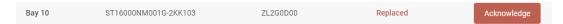




Figure 150: Acknowledge the replacement disk

3. Go to Management > RSS, the new replacement disk will be listed under Non-member Physical Disks.

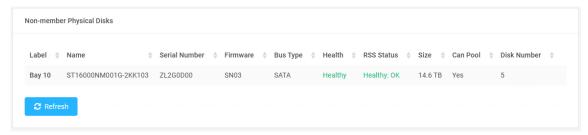


Figure 151: RSS non-member physical disks

4. Click on the '‡' and select 'Repair Virtual Disks' to repair the virtual disk.

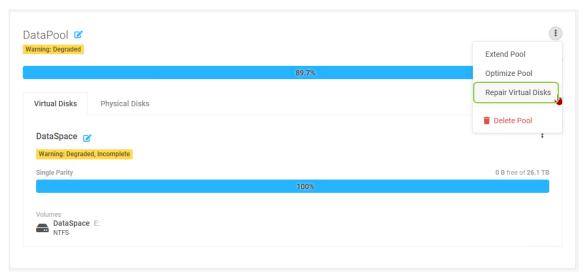


Figure 152: RSS non-member physical disks

5. Enter storage pool name and click on the 'Repair' button to start repair.

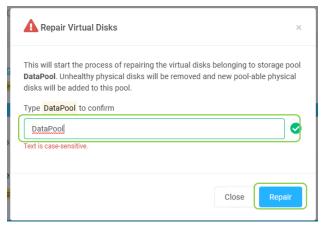


Figure 153: Confirm delete pool

6. After the RSS repair process is complete, the health of the storage pool and virtual disk will return to normal.



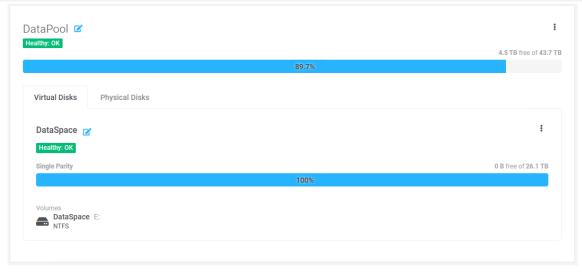


Figure 154: RSS healthy storage pool and virtual disk



# 9.5 Settings

Any event trigger can be set send email to respective personnel for any abnormal event.

### 9.5.1 Email Recipient Settings

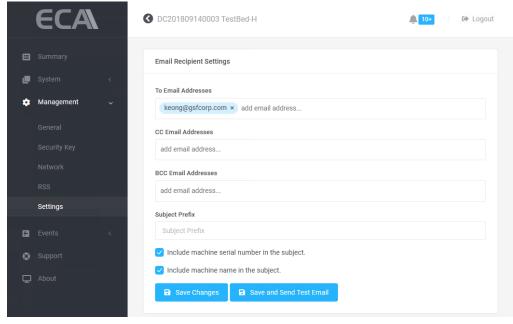


Figure 155: Email Setting (1 of 2)

#### 9.5.2 Mail Servers

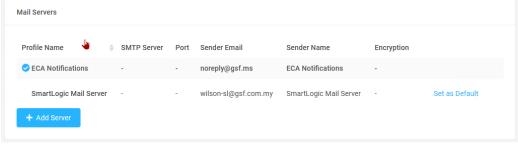


Figure 156: Email Setting (2 of 2)

#### **9.5.3** Events

All monitoring application under System able to set notify in the desktop, send the email or both.

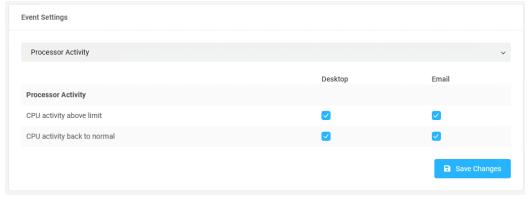


Figure 157: Events

1. Select event to be set by click drop down.



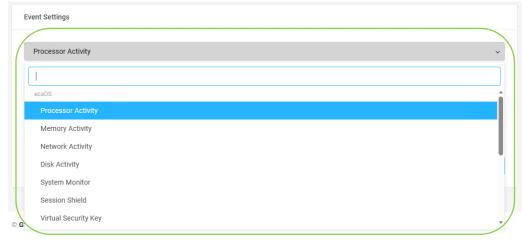


Figure 158: Select event (1 of 2)

- 2. Check the box to enable notification on the desktop or email and click 'Save Changes'
- Setting below will notify user via Desktop notification and email if the memory usage above threshold limit. The user also will notify when the memory usage return to normal state

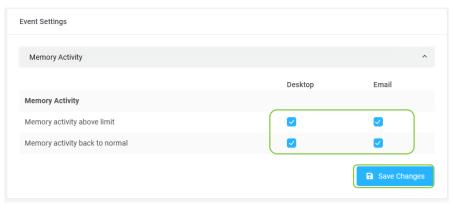


Figure 159: Select event (2 of 2)

#### 9.5.3.1 Events List

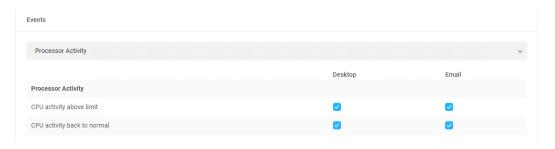


Figure 160: Processor Activity events notify setting



Figure 161: Memory Activity events notify setting



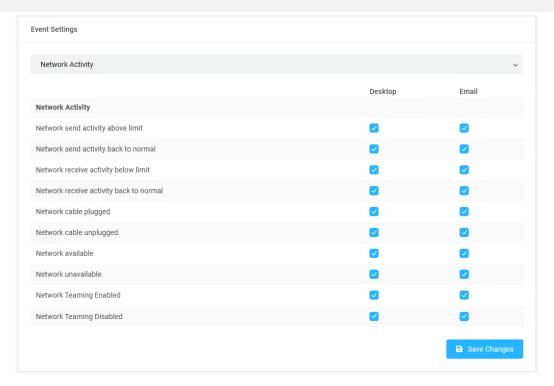


Figure 162: Network Activity events notify setting

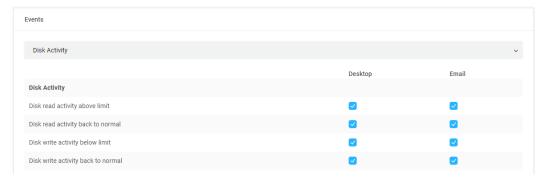


Figure 163: Disk Activity events notify setting



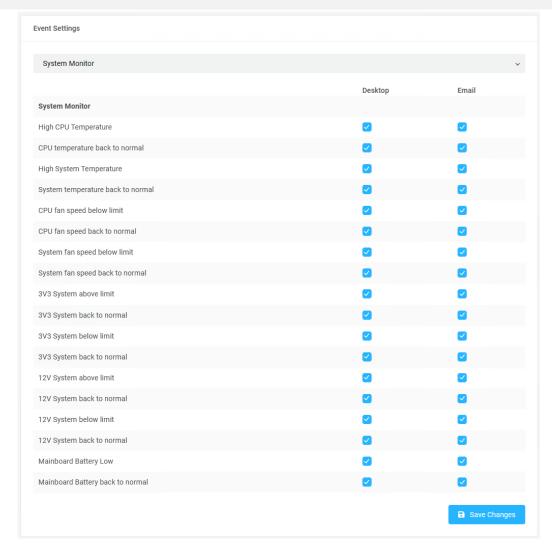


Figure 164: System Monitor events notify setting

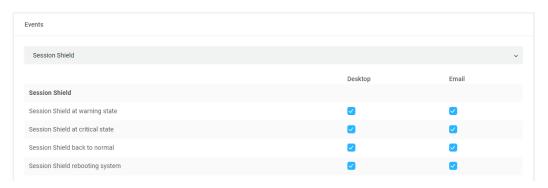


Figure 165: Session Shield events notify setting



Figure 166: Virtual Security Key events notify setting



Figure 167: Security Key events notify setting

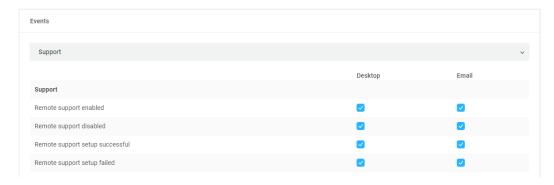


Figure 168: Support events notify setting



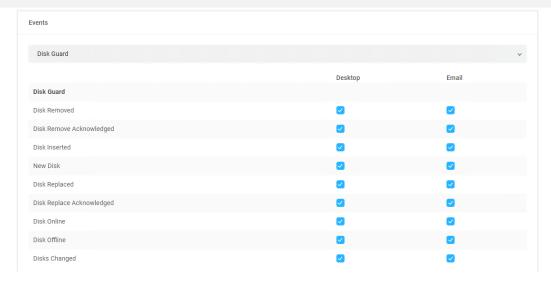


Figure 169: Disk Guard events notify setting

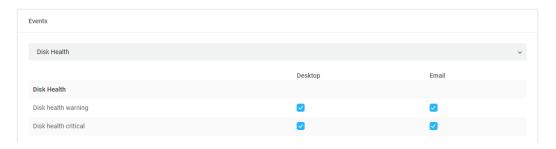


Figure 170: Disk Health events notify setting

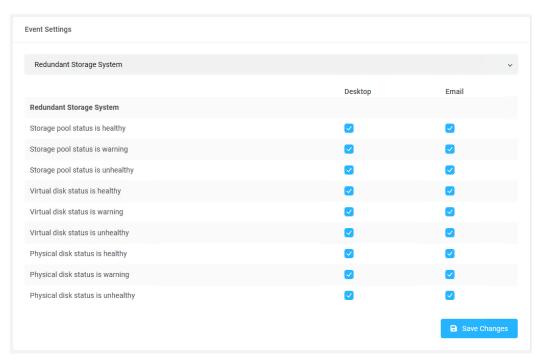


Figure 171: Redundant Storage System notify setting



Figure 172: Heartbeat firmware events notify setting



Figure 173: ECA Layer events notify setting

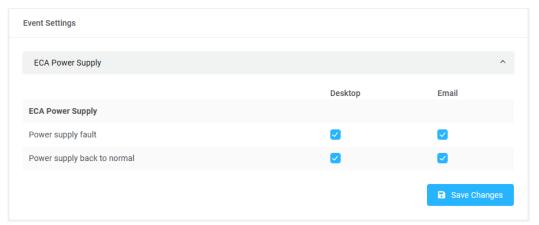


Figure 174: ECA Power Supply events notify setting (ONLY applies to ECA45 with TBSP-ECAPSU-R600 power supply unit)



# 10 Events

### 10.1 Notification

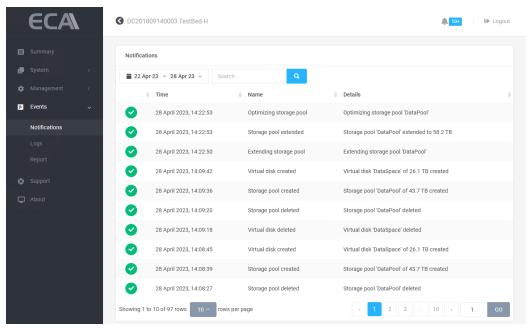


Figure 175: Notification



# 10.2 Logs

An event log is a file that contains information about usage, operations and activity of the ECA system. The log can be filtered by specifying data range and/or inserting keyword(s).

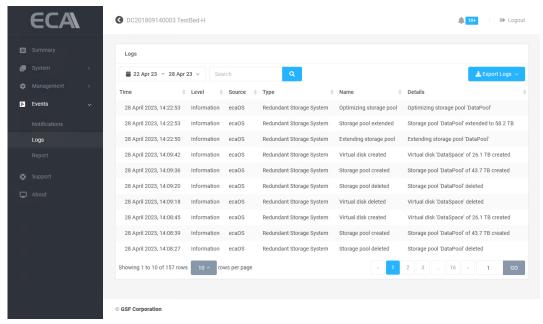


Figure 176: Log

### 10.2.1 Filtering Log

Filter by can choose by Today, Yesterday, Last 3 days, Last 7 Days, Last 30 Days or Custom data range.

Type any keyword and click on magnetify glass icon to start filtering. Click 'Apply' to filter the Logs.

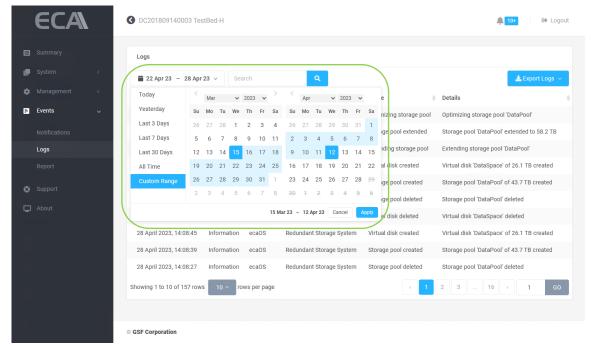


Figure 177: Filter log



# 10.2.2 Exporting Log

1. Click on the 'Export Logs' button

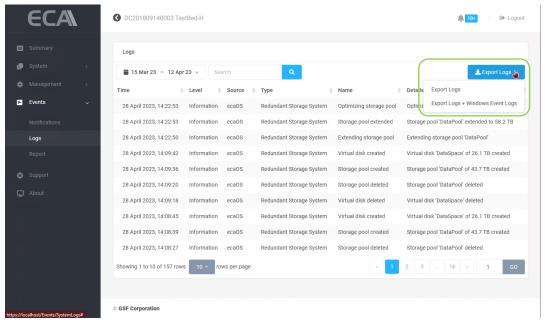


Figure 178: Export Log (1 of 8)

2. Click OK to start export the current log

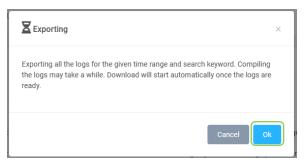


Figure 179: Export Log (2 of 8)

3. The log will export to Downloads folder in compress format

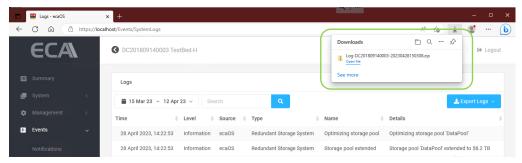


Figure 180: Export Log (3 of 8)



4. The log will be export to under Downloads. The exported log can be retrieved via Explorer.

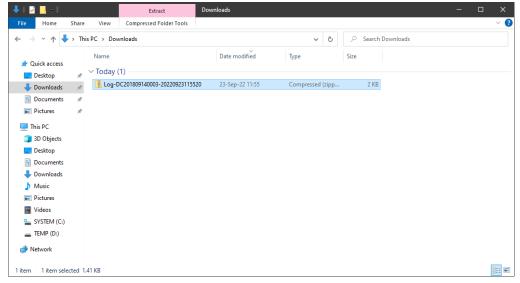


Figure 181: Exporting log (4 of 8)

5. Extract the file by right click on the file and select Extract All.

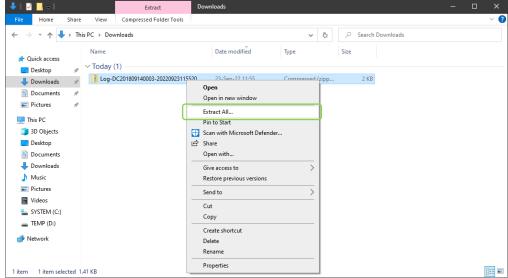


Figure 182: Exporting log (5 of 8)

#### **ECA USER GUIDE**



6. Choose the location to extra the file and click Extract button.

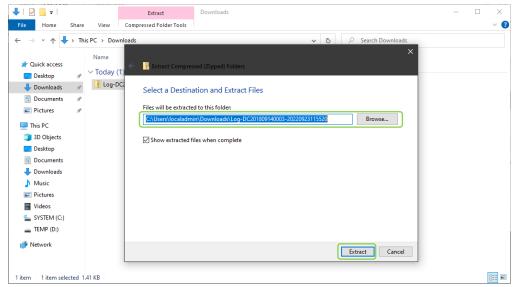


Figure 183: Exporting log (6 of 8)

7. The log file saved in comma-separated values (CSV) format.

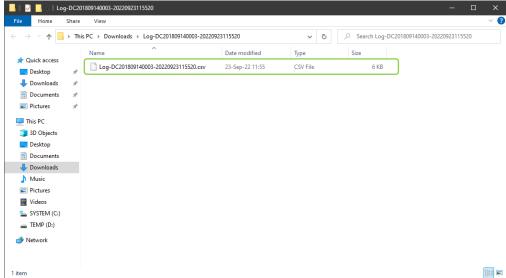


Figure 184: Exporting log (7 of 8)

8. Use Spreadsheet program to open the log file.

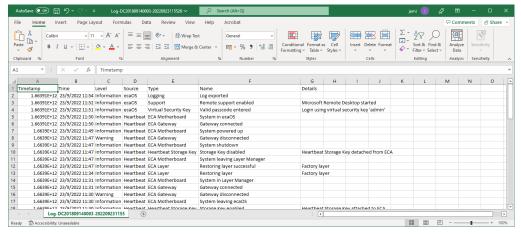


Figure 185: Exporting log (8 of 8)



# 10.3 Report

Report will be auto generated and sent to all recipients daily at: 23:55 or manually download by click on the 'Download System Report' button.

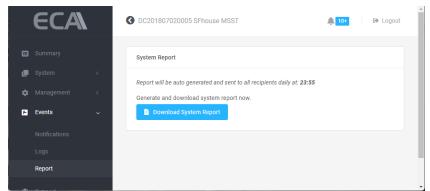


Figure 186: Manual Report Download at Events > Report section

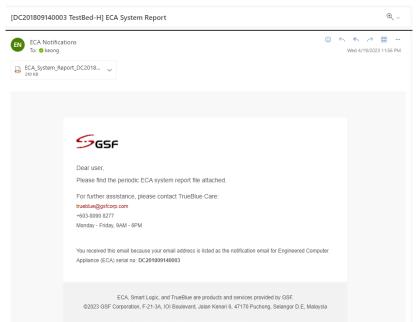


Figure160A: ECA email an ECA report

## **ECA USER GUIDE**



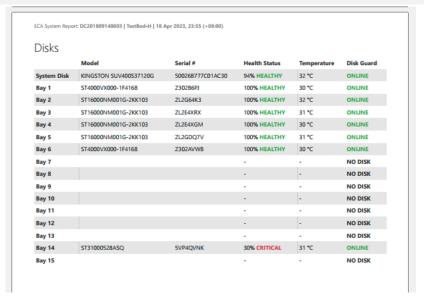


Figure 187B: Example ECA report in PDF format



# 11 Support

# 11.1 Microsoft Remote Desktop

Microsoft Remote Desktop app to connect to a remote PC or virtual apps and desktops made available by your admin.

Click on 'Start' button under Microsoft Remote Desktop

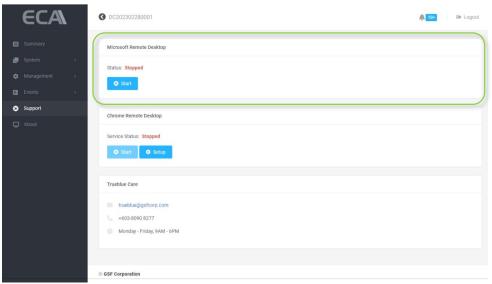


Figure 188: Microsoft Remote Support

From local PC. Enter computer name or IP address of the remote ECA.



Figure 189: Trueblue Remote Support (1 of 2)

NOTE: You will require to port forward in your router to allowed Remote Desktop to be accessible via internet. Default port is 3389



# 11.2 Chrome Remote Desktop

This option allows you to access your ECA remotely from your PC/Laptop using your own Google account without require any port forwarding setting in the router. Before begin, Chrome Remote Desktop work in both Google Chrome or Microsoft Edge Browser, at the address bar type: <a href="https://remotedesktop.google.com/access">https://remotedesktop.google.com/access</a> then follow the directions to enabled Chrome Remote Desktop in your browser.

## 11.2.1 Setup ECA into your Chrome Remote Desktop

In your PC/Laptop, run Chrome/Edge and enter <a href="https://remotedesktop.google.com/headless">https://remotedesktop.google.com/headless</a>

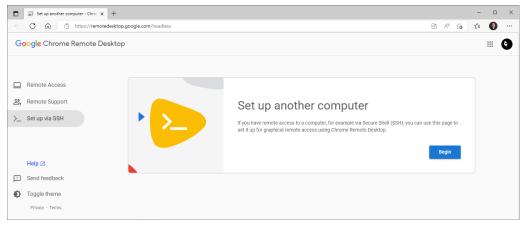


Figure 190: Chrome Remote Desktop (1 of 6)

#### 1. Click 'Begin'

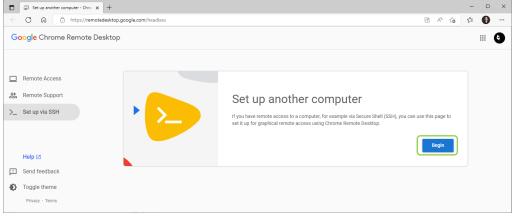


Figure 191: Chrome Remote Desktop (2 of 6)



#### 2. Click 'Next'

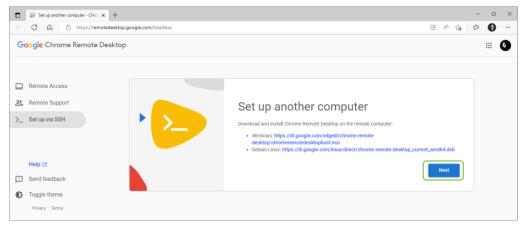


Figure 192: Chrome Remote Desktop (3 of 6)

#### 3. Click 'Authorize'

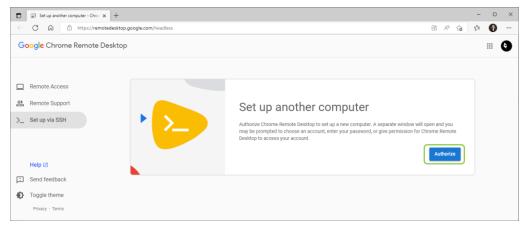


Figure 193: Chrome Remote Desktop (3 of 6)

4. Copy command for Windows (Cmd)

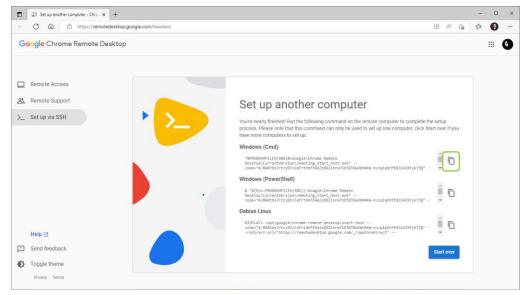


Figure 194: Chrome Remote Desktop (4 of 6)

5. From the ECA machine, go to Support. Under 'Chrome Remote Desktop', click setup



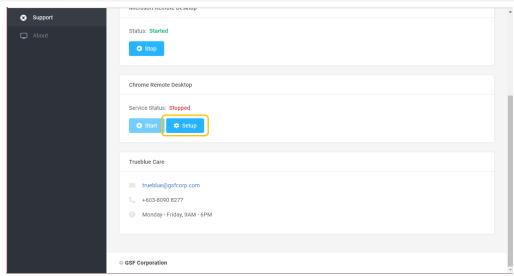


Figure 195: Chrome Remote Desktop (5 of 6)

6. Paste the command and enter 6-digit PIN number as a password.

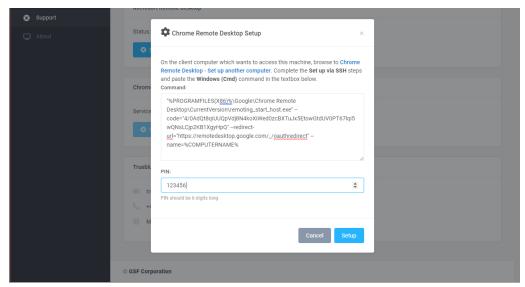


Figure 196: Chrome Remote Desktop (6 of 6)



## 11.2.2 Accessing ECA via Chrome Remote Desktop?

1. From the ECA will be remote. Make sure the service status Started

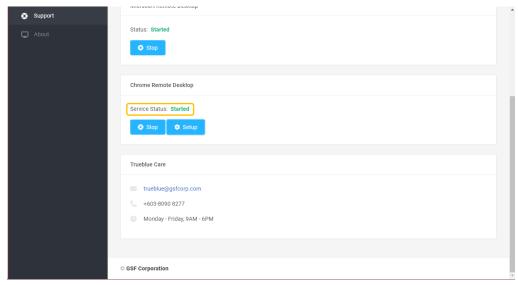


Figure 197: Accessing ECA via Chrome Remote Desktop (1 of 4)

2. From remote machine. Run web browser enter <a href="https://remotedesktop.google.com/access/">https://remotedesktop.google.com/access/</a>. Click on remote devices.

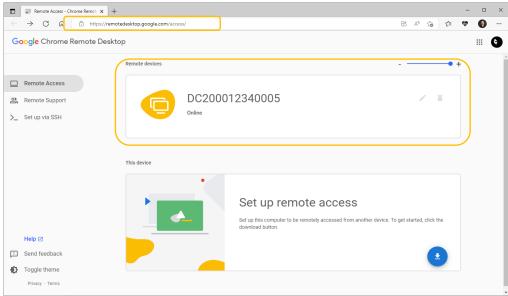


Figure 198: Accessing ECA via Chrome Remote Desktop (2 of 4)

3. Enter 6-digit PIN previously set during setup to start login



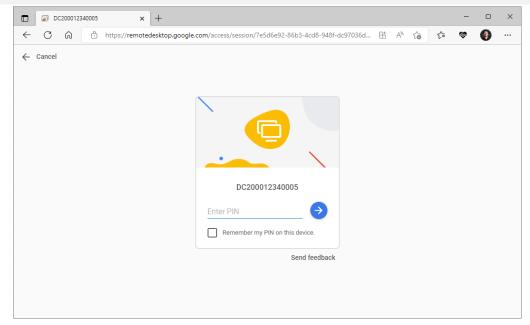


Figure 199: Accessing ECA via Chrome Remote Desktop (3 of 4)

#### 4. Access the ECA

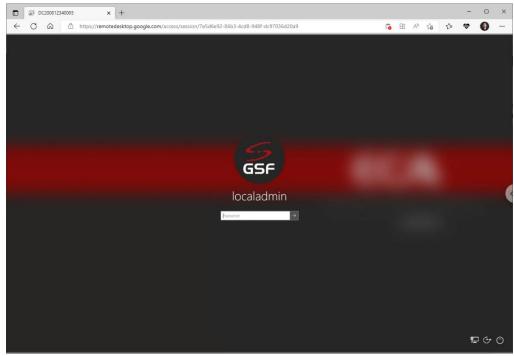


Figure 200: Accessing ECA via Chrome Remote Desktop (4 of 4)



# 12 About

## 12.1 Machine Information

The ECA information display here such as Model, Serial Number, ecaOS version, Up time, when last reboot.

The IP address will be display if the ECA connected to local LAN.

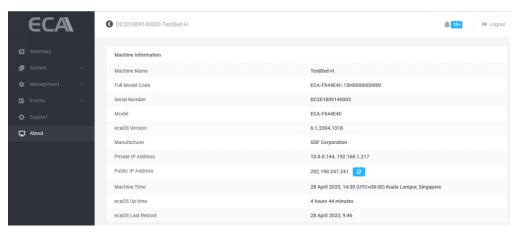


Figure 201: Machine Information



# 12.2 Heartbeat Information

The Heartbeat is around the clock hardware safeguard. Its micro controller overlooks the whole hardware platform to ensure continuous operation even in the event of critical breakdown.

'Factory Layer Last Saved' (Hard Reset) & Deployment Layer Last Saved' (Soft Reset) it shows the date of the layer saved.

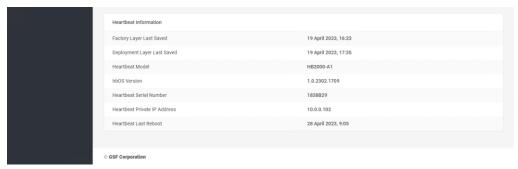



Figure 202: Heartbeat Information



# 13 APPENDIX


# 13.1 Processor Activity

## 13.1.1 CPU activity above limit

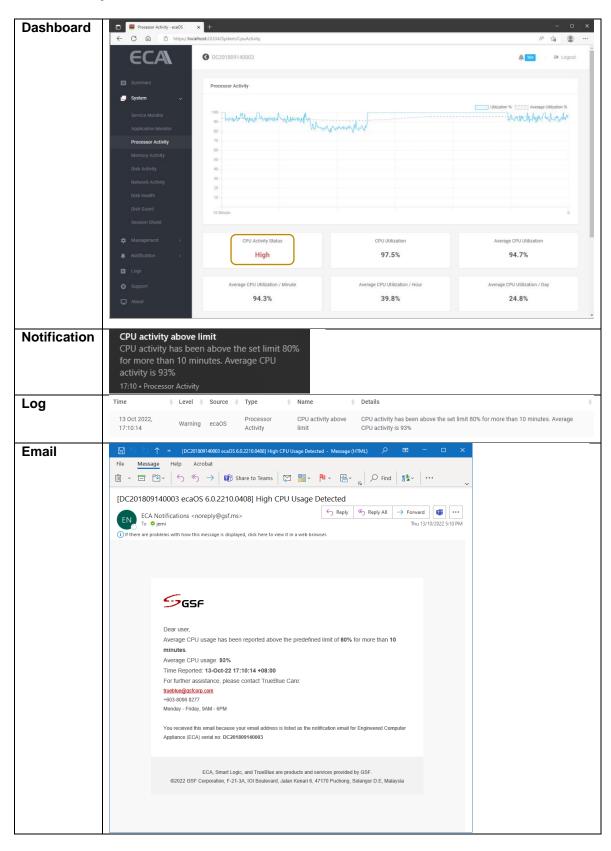




## 13.1.2 CPU activity back to normal

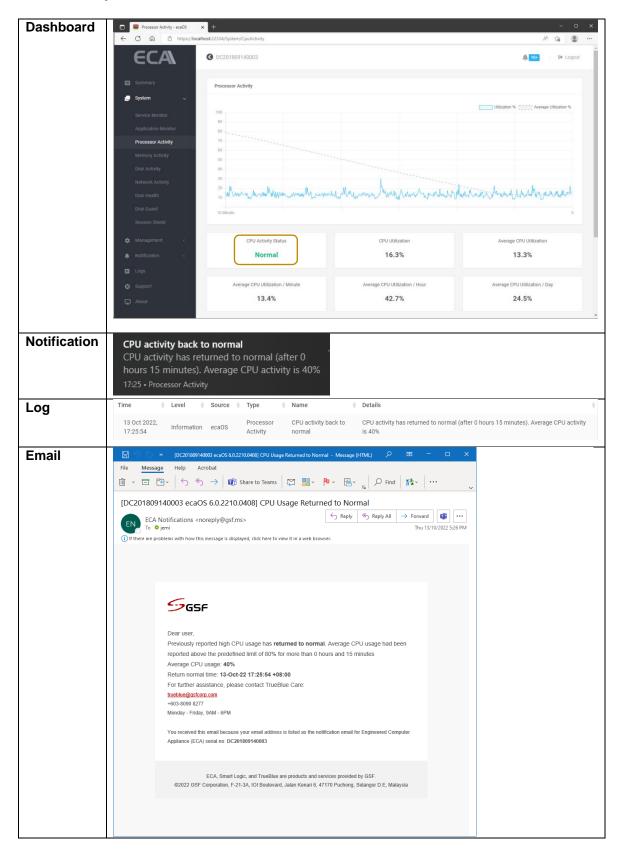




# 13.2 Memory Activity

### 13.2.1 Memory usage above limit

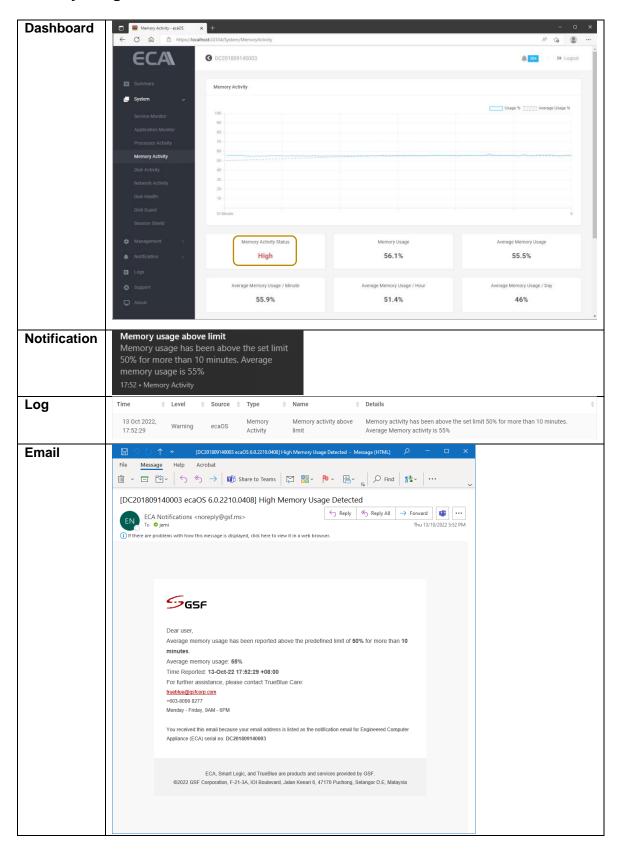




## 13.2.2 Memory activity back to normal

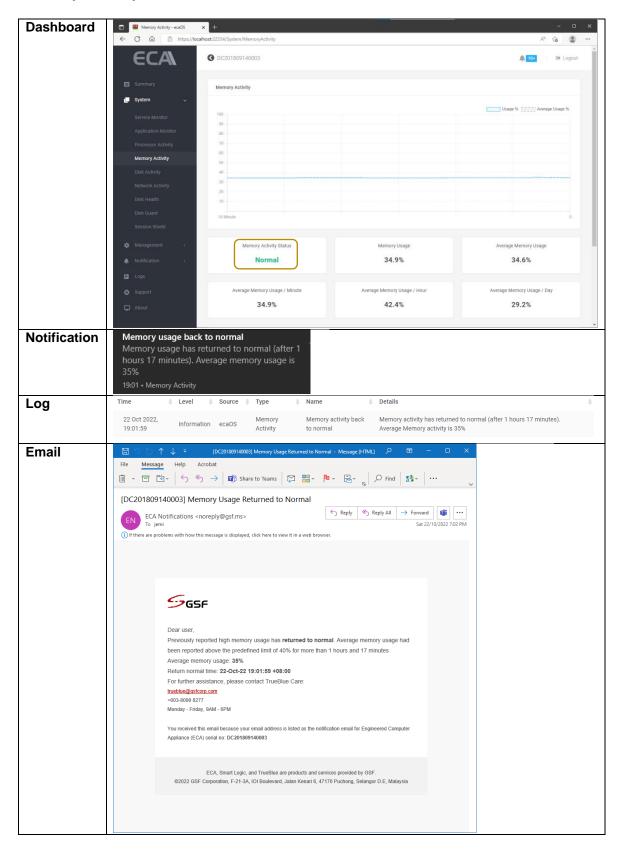




# 13.3 Disk Activity

# 13.3.1 Disk read activity above limit

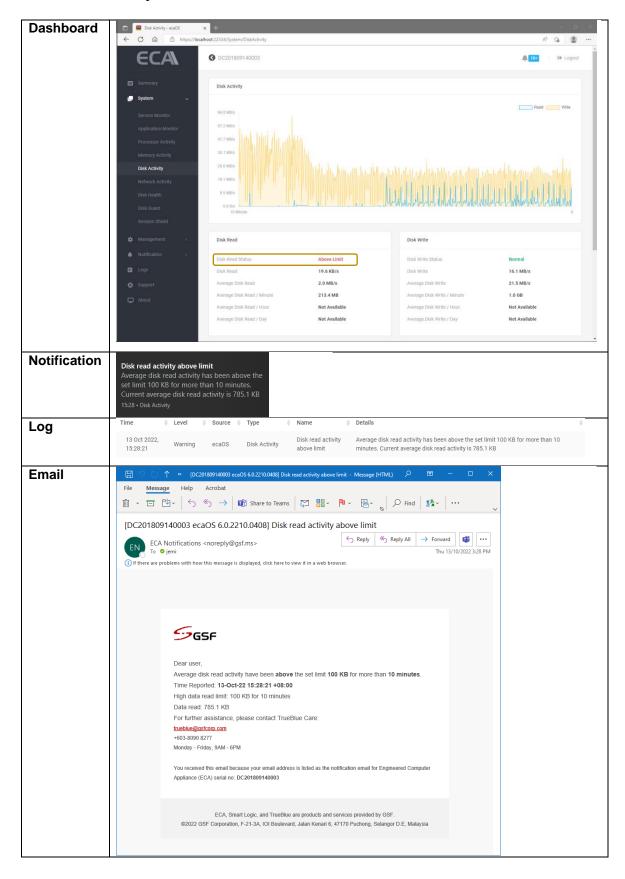




## 13.3.2 Disk read activity back to normal

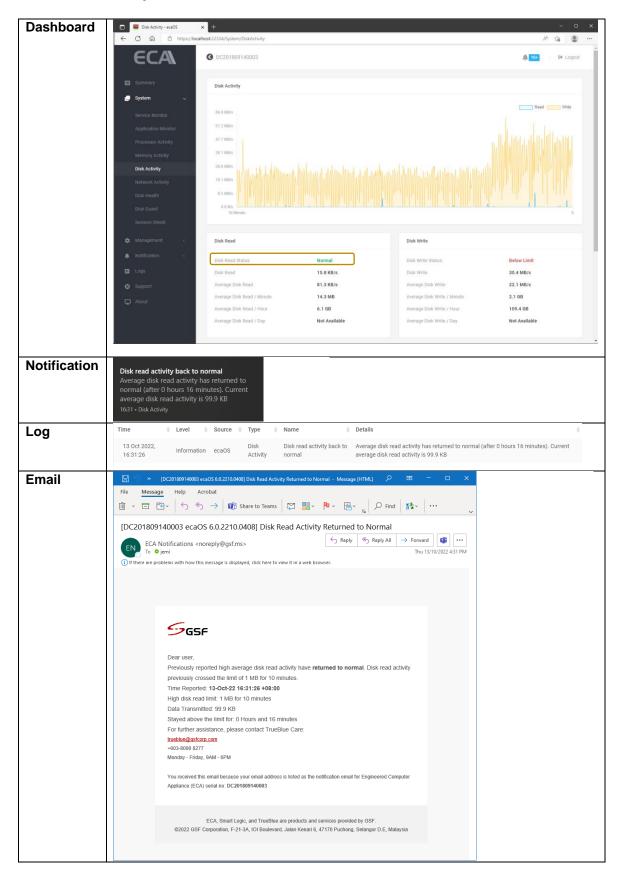




## 13.3.3 Disk write activity below limit

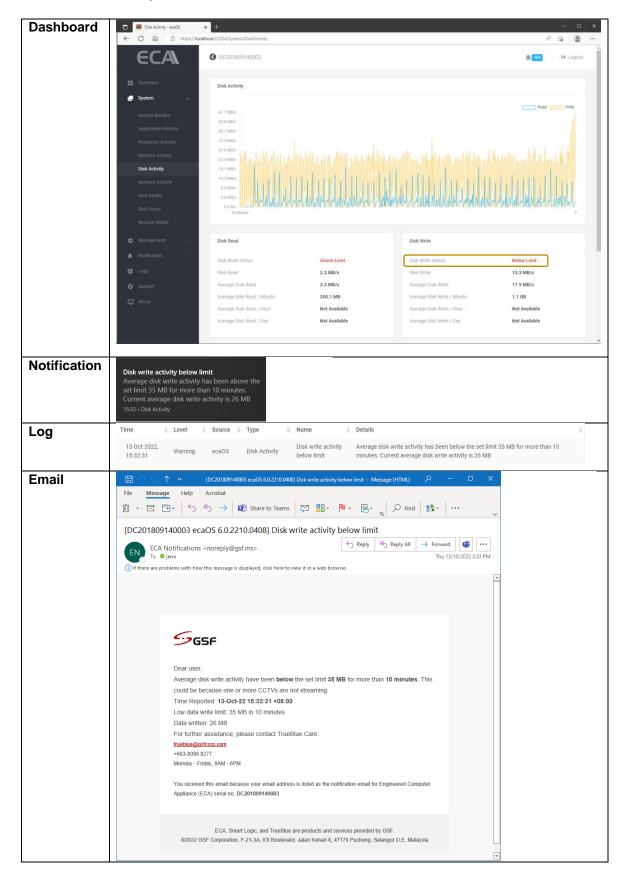




## 13.3.4 Disk write activity back to normal

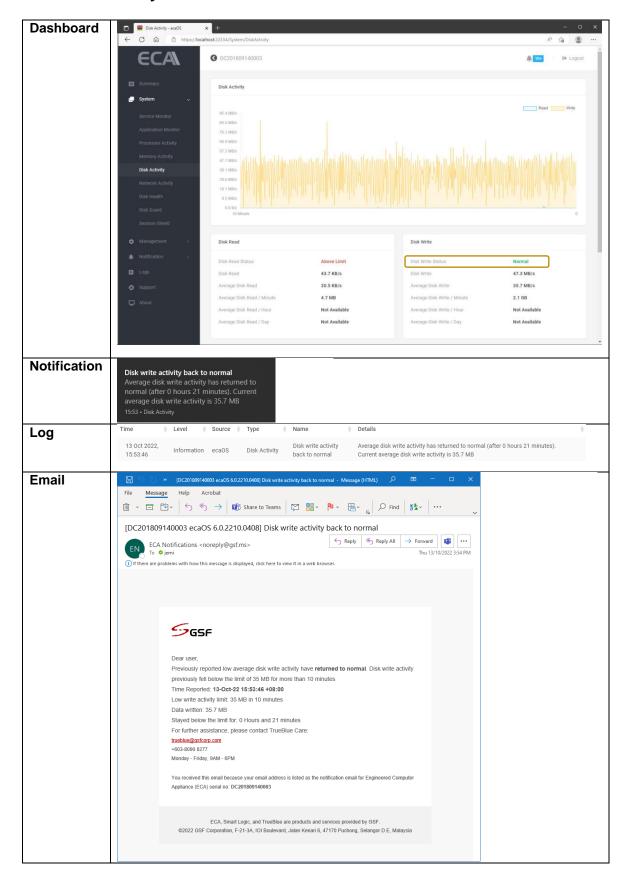




# 13.4 Network Activity

## 13.4.1 Network send activity above limit

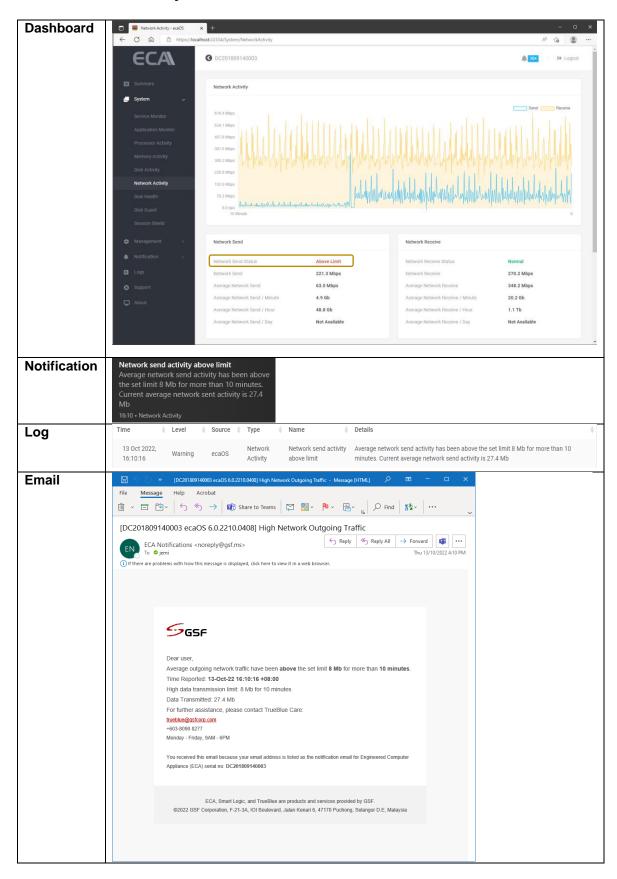




## 13.4.2 Network send activity back to normal

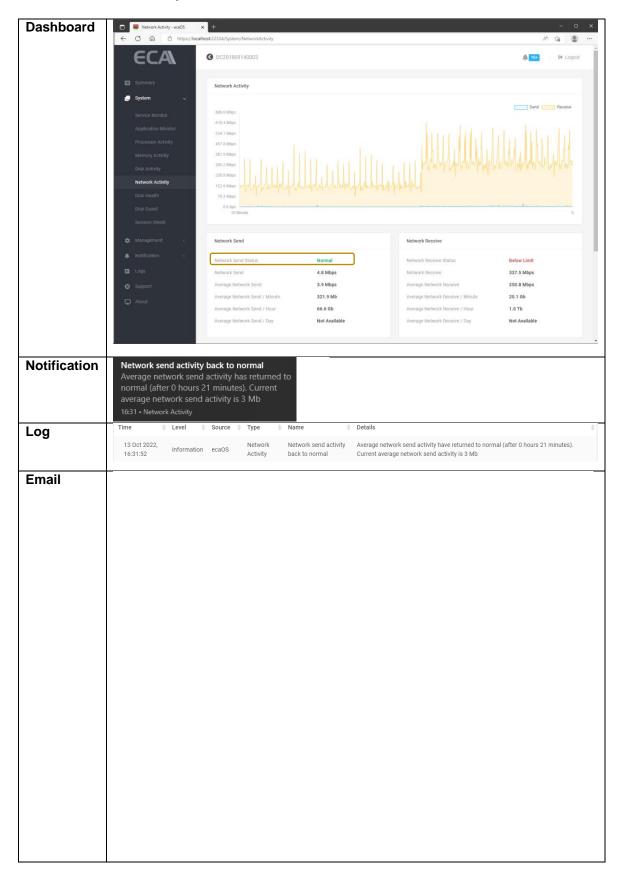




## 13.4.3 Network receive activity below limit

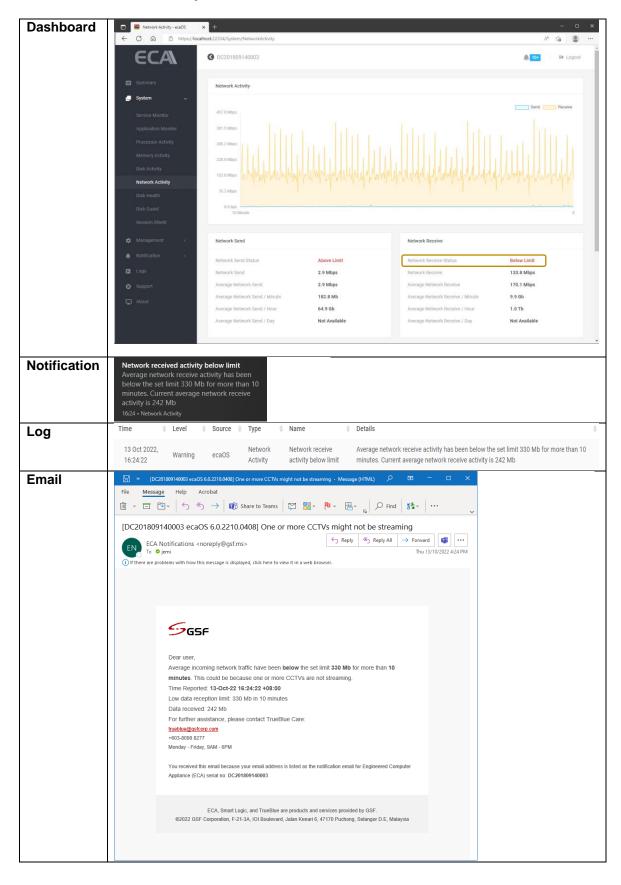




## 13.4.4 Network receive activity back to normal

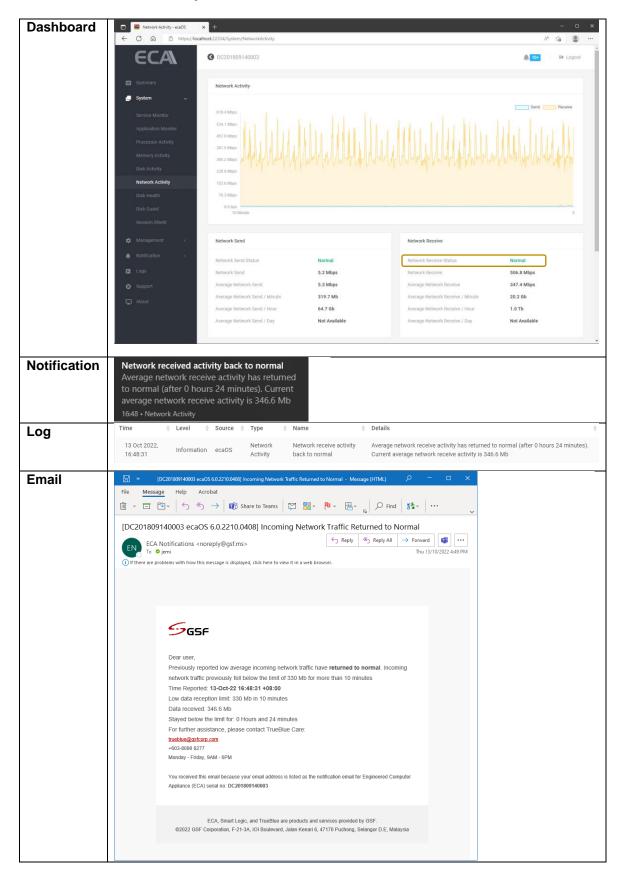




## 13.5 Session Shield

## 13.5.1 Warning Status

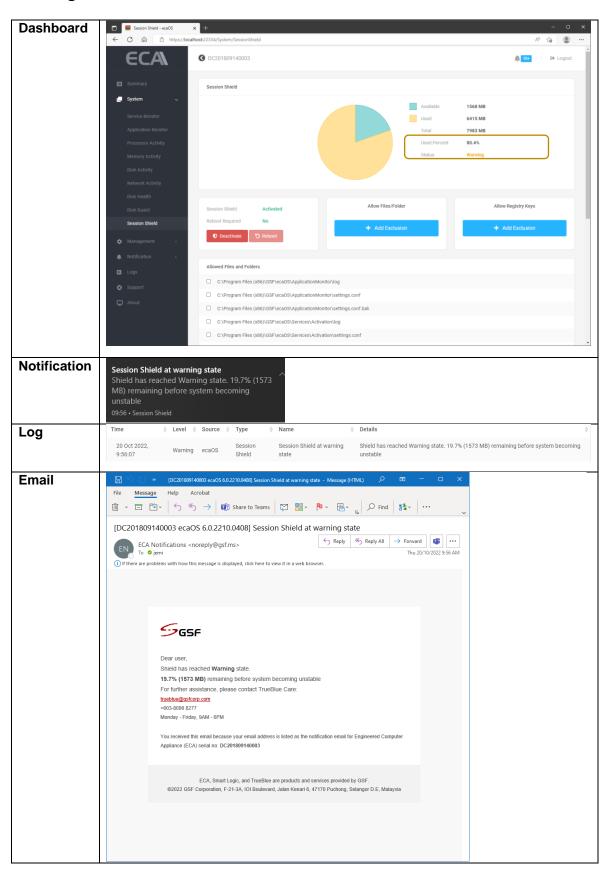




#### 13.5.2 Critical Status

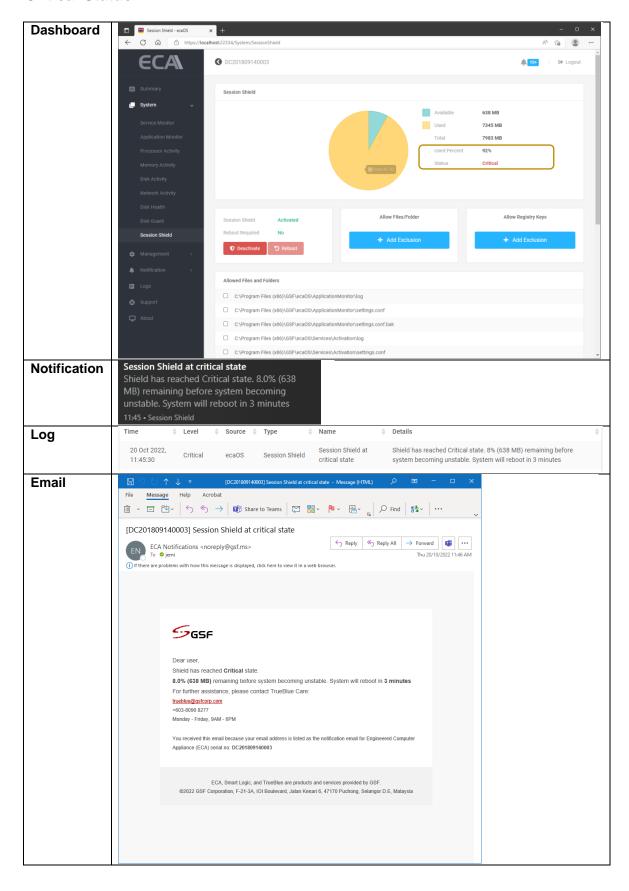




#### 13.5.3 Status back to normal

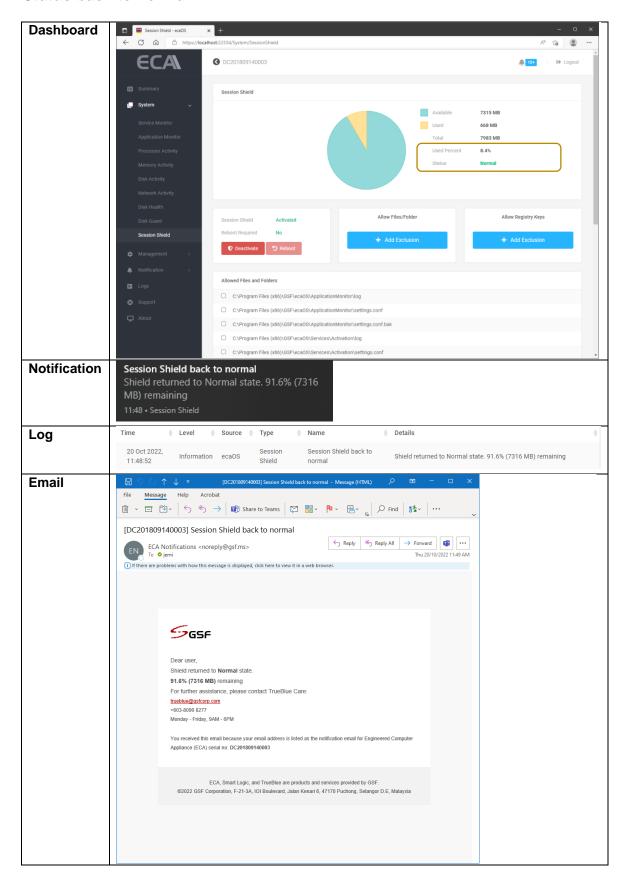




## 13.6 Disk Health

### 13.6.1 Warning Status Disk

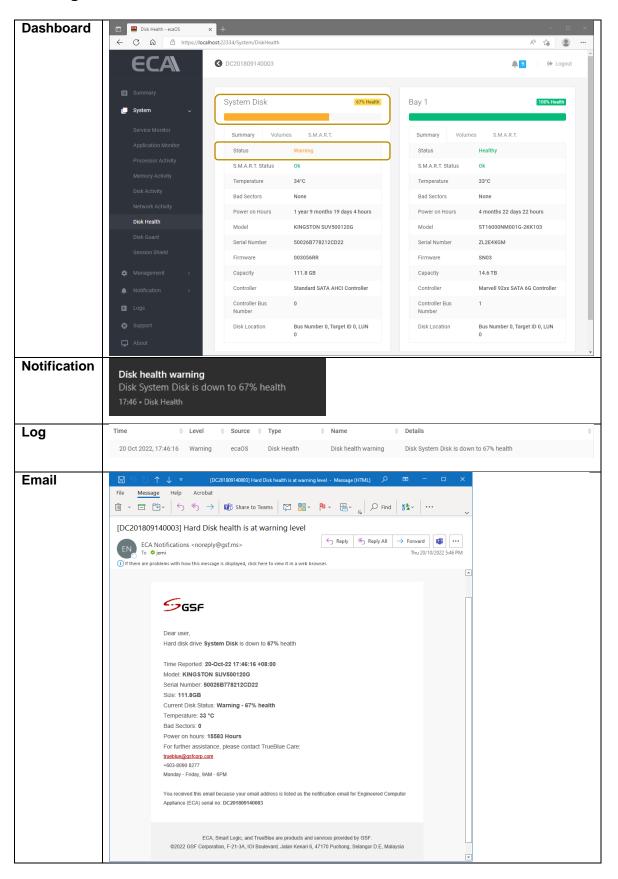




#### 13.6.2 Critical Status Disk

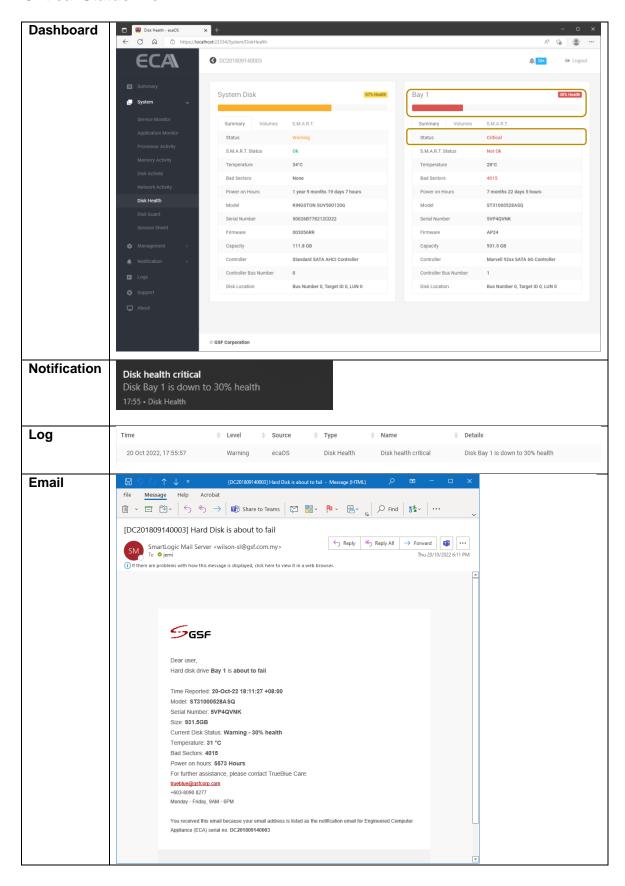




## 13.7 Disk Guard

#### 13.7.1 New disk / Disk Inserted

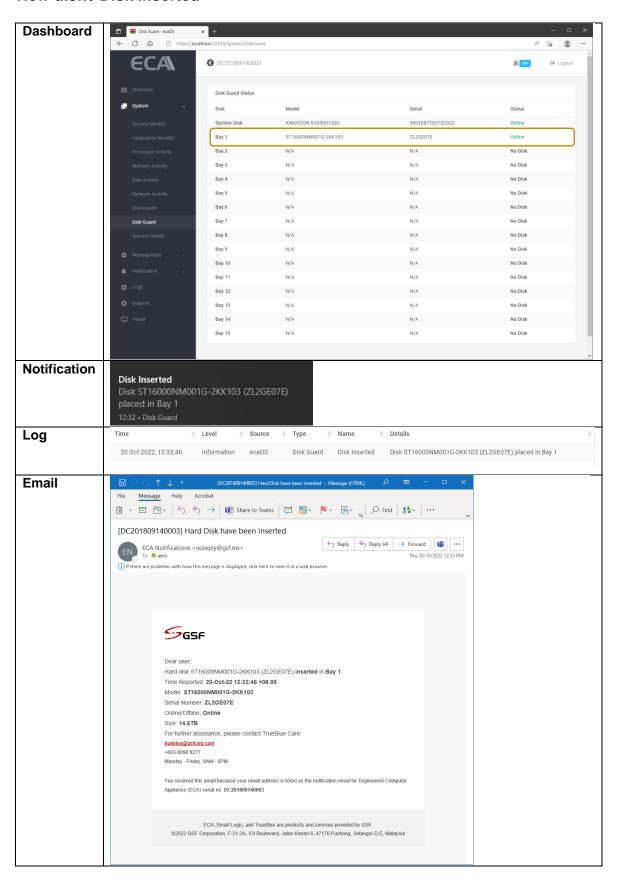




#### 13.7.2 Disk Removed

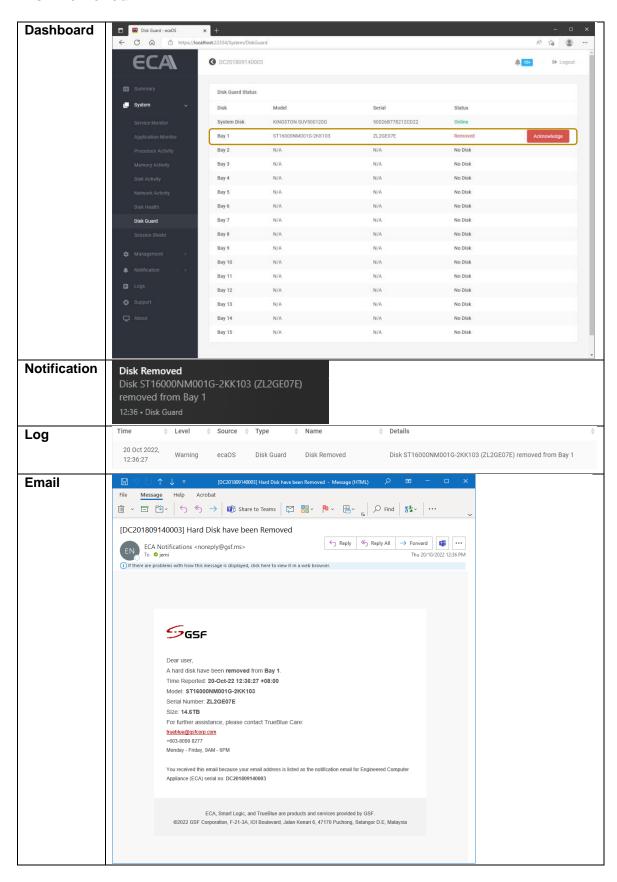




# 13.7.3 Disk Removed Acknowledge

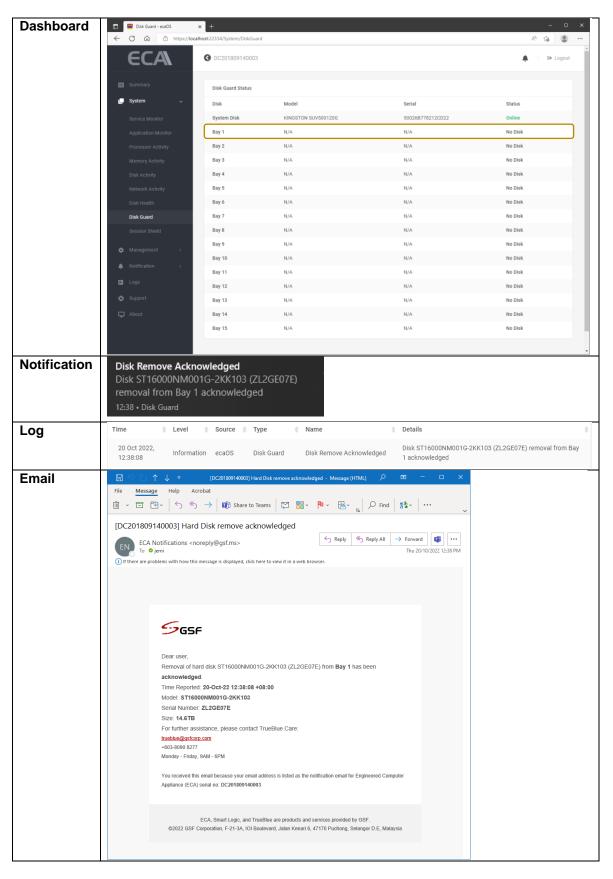




## 13.7.4 Disk Replaced

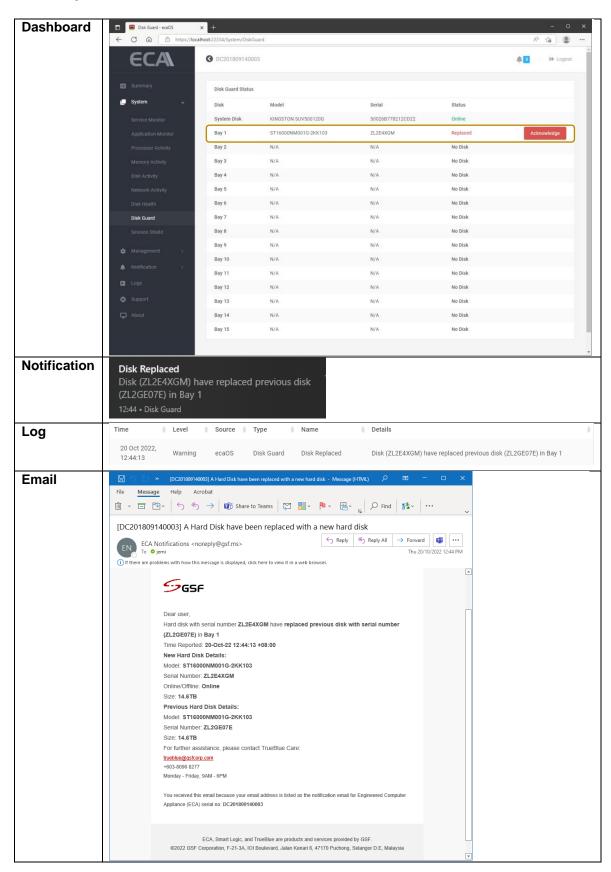



# 13.7.5 Disk Replaced Acknowledge

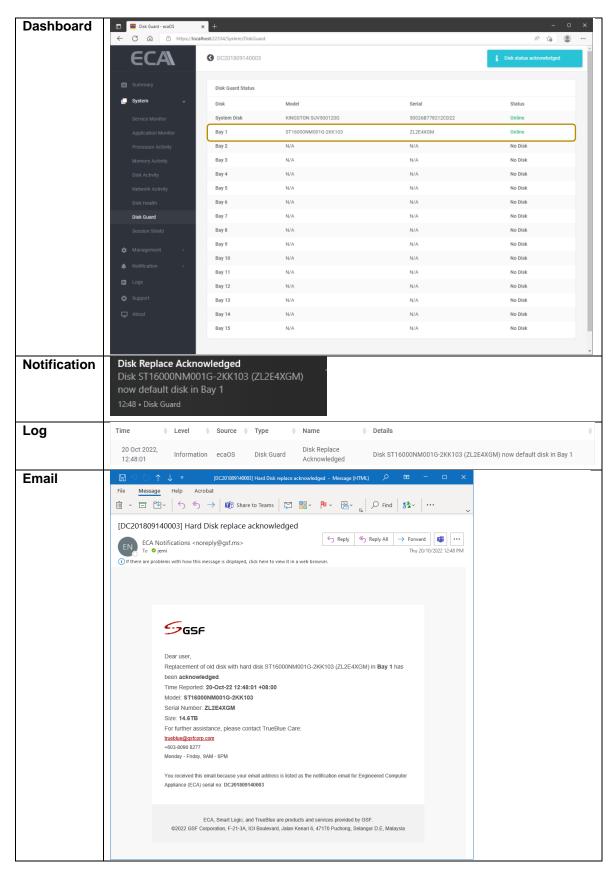



# 13.8 Log

#### 13.8.1 ECA reboot more than 3 times

Figure 203 Show chronological events in log when ECA reboot more than 3 times within 1 hour

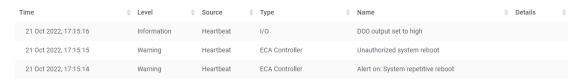


Figure 203

#### 13.8.2 AC Power loss

Figure 204 Show chronological events in log when AC power loss.

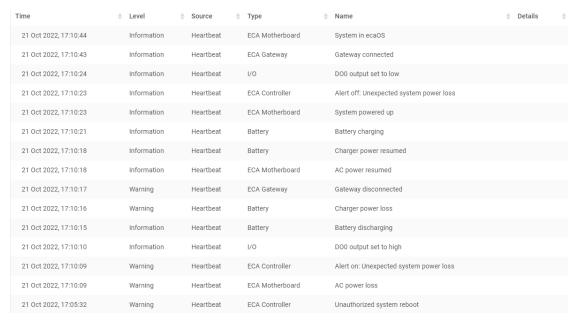


Figure 204

#### 13.8.3 Unauthorize ECA Reboot

Figure 205 Show chronological events in log when ECA reboot does not through Dashboard.



Figure 205



#### 13.8.4 Unauthorize ECA Shutdown

Figure 206 Show chronological events in log when ECA shutdown does not through Dashboard.

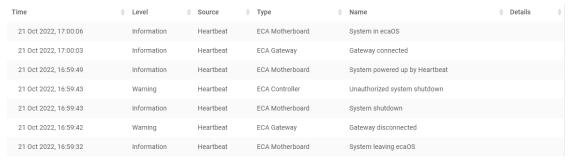


Figure 206

#### 13.8.5 Authorize ECA Shutdown

Figure 207 Show chronological events in log when ECA shutdown through Dashboard.



Figure 207

#### 13.8.6 Authorize ECA Reboot

Figure 208 Show chronological events in log when ECA reboot through Dashboard.

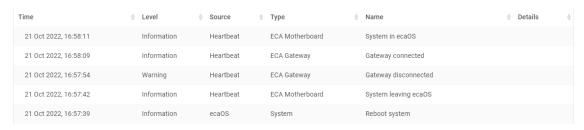


Figure 208

## 13.8.7 Power up ECA by pressing power button

Figure 209 Show chronological events in log when ECA power up by pressing power button



Figure 209



## 13.8.8 Force shutdown by pressing power (heartbeat) button

Figure 210 Show chronological events in log when force shutdown by long pressed power button

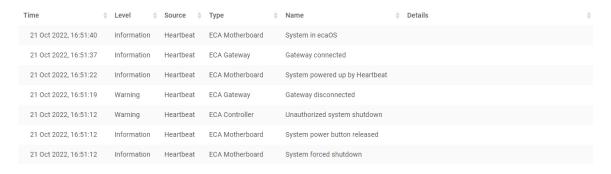


Figure 210

## 13.8.9 Accessing Dashboard using Security Key

Figure 211 Show chronological events in log when accessing dashboard using security key



Figure 211

## 13.8.10 Accessing Dashboard using Virtual Security Key

Figure 212 Show chronological events in log when accessing dashboard using Virtual security key



Figure 212

# 13.8.11 Add new Security Key

Figure 213 Show chronological events in log when add new security key.



Figure 213



### 13.8.12 Delete paired Security Key

Figure 214 Show chronological events in log when paired Security Key deleted.



Figure 214

### 13.8.13 Delete Virtual Security Key

Figure 215 Show chronological events in log when existing Virtual Security Key deleted.



Figure 215

## 13.8.14 Add Virtual Security Key

Figure 216 Show chronological events in log when new Virtual Security Key added.



Figure 216

### 13.8.15 Open ECA cover chassis

Figure 217 Show chronological events in log when ECA top cover open.

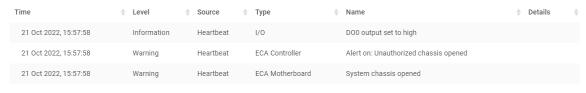


Figure 217

#### 13.8.16 Close ECA cover chassis

Figure 218 Show chronological events in log when ECA top cover close.



Figure 218

#### 13.8.17 **PSU Status**

Figure 219 Show chronological events in the log when a power supply fault is detected and the power supply is restored to normal.

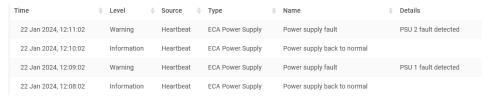


Figure 219

### 13.8.18 Save Layer

Figure 220 Show chronological events in the log after successfully saving a deployment layer.



Figure 220

#### 13.8.19 Soft Reset

Figure 221 Show chronological events in the log after successfully restoring the deployment layer.



Figure 221

#### 13.8.20 Hard Reset

Figure 222 Show chronological events in the log after successfully restoring the factory layer.



Figure 222





Trust our passion that brings us forward. Keep going!



http://gsf.my/ecauserguide